



IVX-C806 IVX-M706 CVA-1006R

Mobile Multimedia Station

- **OWNER'S MANUAL**
Please read before using this equipment.
- **BEDIENUNGSANLEITUNG**
Lesen Sie diese Bedienungsanleitung bitte vor
Gebrauch des Gerätes.
- **MODE D'EMPLOI**
Veuillez lire avant d'utiliser cet appareil.
- **MANUAL DE OPERACIÓN**
Léalo antes de utilizar este equipo.
- **ISTRUZIONI PER L'USO**
Si prega di leggere prima di utilizzare il
attrezzatura.
- **ANVÄNDARHANDLEDNING**
Innan du använder utrustningen bör du läsa
igenom denna användarhandledning.



ALPINE ELECTRONICS, INC.
Tokyo office: 1-1-8 Nishi Gotanda,
Shinagawa-ku,
Tokyo 141-8501, Japan
Tel.: (03) 3494-1101

ALPINE ELECTRONICS OF AMERICA, INC.
19145 Gramercy Place, Torrance,
California 90501, U.S.A.
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.
Suite 203, 7300 Warden Ave. Markham,
Ontario L3R 9Z6, Canada
Tel.: 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.
6-8 Fiveways Boulevard Keysborough,
Victoria 3173, Australia
Tel.: (03) 9769-0000

ALPINE ELECTRONICS GmbH
Kreuzerkamp 7-11 40878 Ratingen, Germany
Tel.: 02102-45 50

ALPINE ITALIA S.p.A.
Via C. Colombo 8, 20090 Trezzano Sul Naviglio
MI, Italy
Tel.: 02-48 47 81

ALPINE ELECTRONICS FRANCE S.A.R.L.
(RCS PONTOISE B 338 101 280)
98, Rue De La Belle Etoile, Z.I. Paris Nord II
B.P. 50016 F-95945, Roissy, Charles De Gaulle
Cedex, France
Tel.: 01-48 63 89 89

ALPINE ELECTRONICS OF U.K., LTD.
13 Tanners Drive, Blakelands, Milton Keynes
MK14 5BU, U.K.
Tel.: 01908-61 15 56

ALPINE ELECTRONICS DE ESPAÑA, S.A.
Portal De Gamarra 36, Pabellón 32
01013 Vitoria (Alava)-Apdo. 133, Spain
Tel.: 34-45-283588

EN

DE

FR

ES

IT

SE

CD changer for IVX-C806/IVX-M706/CVA-1006R.
CD-Wechsler für IVX-C806/IVX-M706/
CVA-1006R.
Changeur CD pour IVX-C806/IVX-M706/
CVA-1006R.
Cambiador de CD para IVX-C806/IVX-M706/CVA-
1006R.
Cambia CD per IVX-C806/IVX-M706/CVA-1006R.
CD-växlare för IVX-C806/IVX-M706/CVA-1006R.



CHA-S624

CD changer for IVX-C806/IVX-M706/CVA-1006R.
CD-Wechsler für IVX-C806/IVX-M706/
CVA-1006R.
Changeur CD pour IVX-C806/IVX-M706/
CVA-1006R.
Cambiador de CD para IVX-C806/IVX-M706/CVA-
1006R.
Cambia CD per IVX-C806/IVX-M706/CVA-1006R.
CD-växlare för IVX-C806/IVX-M706/CVA-1006R.



CHA-1214

You cannot connect to IVX-C806/IVX-M706/CVA-1006R.
Ein Anschluß an IVX-C806/IVX-M706/CVA-1006R
ist nicht möglich.
Il est impossible de se raccorder au IVX-C806/IVX-
M706/CVA-1006R.
No es posible conectarlo a IVX-C806/IVX-M706/CVA-1006R.
Non è possibile effettuare il collegamento a
IVX-C806/IVX-M706/CVA-1006R.
Du kan inte ansluta till IVX-C806/IVX-M706/CVA-1006R.



CHM-S620

Alpine CD Changers Give You More!

More musical selections, more versatility, more convenience.

An Alpine CD Changer adds more musical choices to your sound system. All models except CHM-S620 can be controlled from Alpine head units and deliver excellent sound quality. The CHA-S624 is a high-performance 6-disc changer with a new M DAC, Ai-NET compatibility, Optical Digital Output, 150 Disc Title Memory and CD TEXT. The CHA-1214 Ai-NET model holds 12 discs, and the CHM-S620 M-Bus model is a super-compact 6-disc changer.

Von Alpine CD-Wechslern haben Sie mehr!

Mehr Musikauswahl, mehr Vielseitigkeit, mehr Komfort.

Mit einem Alpine CD-Wechsler erweitern Sie die Musikauswahl Ihres Systems. Sämtliche Modelle außer dem CHM-S620 lassen sich von einer Alpine-Bedieneinheit aus steuern und liefern hervorragende Klangqualität. Der CHA-S624 ist ein Ai-NET-kompatibler Hochleistungs-Wechsler für 6 CDs mit dem neuen M-DAC, Digitalausgang für Glasfaserkabel, CD-Titelspeicher für 150 Titel und CD-TEXT. Das Ai-NET-Modell CHA-1214 nimmt 12 CDs auf, und der M-Bus-kompatible CHM-S620 ist ein superkompakter Wechsler für 6 CDs.

Changeurs de CD Alpine : vous avez le choix!

Plus de sélections musicales, plus de souplesse, plus de confort.

Un changeur de CD Alpine permet d'augmenter la plage des sélections musicales de votre système embarqué. Tous les modèles, l'exception du CHM-S620, peuvent être contrôlés à partir des autoradios Alpine et offrent une excellente qualité audio. Le modèle CHA-S624 est un changeur 6 disques ultra performant compatible Ai-NET et équipé d'un convertisseur N/A standard, d'une sortie optique numérique, d'une mémoire d'une capacité de 150 titres et de la fonction CD TEXT. Le modèle CHA-1214 Ai-NET peut contenir 12 disques. Le modèle CHM-S620 M-Bus est un changeur 6 disques super compact.

¡Los cambiadores Alpine de CD le ofrecen más!

Más selecciones musicales, más versatilidad y más ventajas.

Un cambiador Alpine de CD añade más opciones musicales a su equipo de sonido. Todos los modelos, excepto el CHM-S620, pueden controlarse desde las unidades principales de Alpine y proporcionar un sonido de calidad excepcional. El modelo CHA-S624 es un cambiador de 6 discos de alto rendimiento con el nuevo DAC "M" y compatibilidad con Ai-NET, salida digital óptica, memoria de títulos de 150 discos y TEXTO CD. El modelo CHA-1214 Ai-NET admite 12 discos y el modelo CHM-S620 Bus-M es un cambiador de 6 discos y tamaño reducido.

I caricatori CD Alpine danno di più!

Più scelta, più versatilità, più comodità.

Un caricatore CD Alpine offre maggiore scelta. Tutti i modelli, eccetto il modello CHM-S620, possono essere controllati tramite le unità di controllo Alpine e producono un suono di qualità eccellente. CHA-S624 è un caricatore a 6 dischi Ai NET compatibile e dotato di un nuovo M DAC, di un'uscita ottica digitale, memorizzazione dei titoli di 150 dischi e CD TEXT. Il modello CHA-1214 Ai NET può contenere un massimo di 12 dischi, mentre il modello CHM-S620 M-Bus è un caricatore a 6 dischi ultra compatto.

Alpines CD-växlare ger mer!

Fler musikval, mer variation, större bekvämlighet.

Med Alpines CD-växlare i systemet får du större musikalisk valfrihet. Alla modeller, utom CHM-S620, kan styras från Alpines huvudenheter och ger enastående ljudkvalitet. CHA-S624 är en högpresterande växlare för 6 skivor med en ny M D/A-omvandlare, kompatibel med Ai-NET, optisk digitalutgång, titelminne för 150 skivor och CD-TEXT. Modellen CHA-1214 Ai-NET rymmer 12 skivor och modellen CHM-S620 M-Bus är en superkompakt växlare för 6 skivor.

Contents

Operating Instructions



WARNING

WARNING	3
CAUTION	3
PRECAUTIONS	4



Basic Operation

Using Face Cover	8
Initial System Start-UP	8
Raising the Monitor	8
Lowering the Monitor	9
Turning Power On or Off	9
Selecting the Monitor Opening Angle	9
Adjusting the Monitor Viewing Angle	9
Adjusting the Volume/Bass/Treble/Balance (Between Left and Right)/Fader (Between Front and Rear)	10
Audio Mute Function	10
Turning Loudness On or Off	10
Adjusting Source Signal Levels	10

Radio Operation

Manual Tuning	11
Automatic Seek Tuning	11
Mono/Stereo Switching	12
Manual Storing of Station Presets	12
Automatic Memory of Station Presets	13
Tuning to Preset Stations	13
T.R.V.S. Search for Local Stations	13

RDS Operation

Turning AF (Alternative Frequencies) On or Off ...	14
Receiving RDS Regional (Local) Stations	14
Receiving Traffic Information	15
PTY (Programme Type) Tuning	15
Receiving Traffic Information While Playing CD/MD/Radio	16
Priority PTY (Programme Type)	17
Turning Emergency Alarm Display On or Off ...	17
Displaying Radio Text	17

CD player Operation (IVX-C806 only) (IVX-M706/CVA-1006R.....optional)

Playback	18
Fast Forward and Backward	18
Music Sensor (Skip)	19
Repeat Play	19
M.I.X. (Random) Play	19
Displaying and Scrolling CD Title/Text	19
Displaying List of Track Titles/CD Titles	20
Controlling CD Changer (Optional)	21
Multi-Changer Selection	21

MD Player Operation (IVX-M706 only) (IVX-C806/CVA-1006R.....optional)

Playing Mini-Disc (MD)	22
Music Sensor (Skip)	22
Fast Forward and Backward	23
Repeat Play	23
M.I.X. (Random) Play	23
Scrolling Displayed Titles	23
Displaying List for Track Titles/MD Titles	23

DVD/Video CD/CD Player/DVD

Changer Operation (Optional)

Playing DVD/Video CD/CD	24
Still/Pause	24
Chapter (DVD)/Track (Video CD) Sensor	24
Fast Forward/Backward	25
Repeat Play	25
Playing tracks in random order (M.I.X.) (Video CD/CD)	25
Displaying List of Disc Titles	25
Controlling DVD Changer	26

Navigation System Operation (Optional)

Controlling Navigation System	27
-------------------------------------	----

Auxiliary Device Operation (Optional)

Operating Auxiliary Devices	28
-----------------------------------	----

Audio Processor Operation (Optional)

Selecting Factory (Maker's) Equalization Presets	29
Creating Personal Equalizer Characteristic Curves	30
Selecting Factory Surround Mode Presets	30
Adjusting Surround Levels and Surround Delay Time	31
Selecting DHE (Digital Harmonic Enhancer) Mode	31
Setting DHE Power or Fine Mode	32
Selecting BBE Mode	32
Customizing BBE Mode	33
Selecting Listening Position	33
Adjusting Listening Position	33
Adjustment of Time Correction Value	34
Adjusting Cross-Over (X-Over) Point of 2-Way Divider	34
Adjusting Levels	35
Adjusting Time-Correction for 2-Way Speaker System	36
Memorizing Divider Settings	37
Recalling Memorized Divider Settings Using Function Buttons	37
Recalling Divider Settings Memorized Using Optional Divider	37
Memorizing Characteristic Curves	37
Recalling Memorized Characteristic Curves Using Function Buttons	38
Selecting Characteristic Curves from Displayed Audio Processor List	38

Other Useful Features

Displaying Spectrum Analyzer (IVX-C806 only)	39
Displaying Spectrum Analyzer (IVX-M706/CVA-1006R only)	40
Turning Defeat Mode On and Off	40
Titling CDs	41
Adjusting Subwoofer Level (when subwoofer is used with other speakers)	42
Switching Phase	43
Setting the External Device Interrupt Mode ...	43

Setting Interrupt Icon Display (IN-INT)	44
Interrupt Feature (MIX LEVEL)	44
Setting Bass Frequency	45
Setting Visual Mode	45
Selecting Rear Monitor	46
Displaying Time	47
Resetting Clock	47
Setting Daylight Saving Time	47
Sound (Beep) Guide Function	48
Demonstration	48
Setting Automatic Opening/Closing of Monitor	49
Adjusting Brightness of Picture	49
Adjusting Tint of Picture	50
Adjusting Colour of Picture	50
Illumination Control	51
Switching Background Textures/Colours	51
Setting Automatic Background Texture/Colour Scroll	52
Switching Display Modes	52
Playing 2 Sources Simultaneously	53

Remote Control Operation

Controls on Remote Control	54
Battery Replacement	55

Information

In Case of Difficulty	56
Specifications	59

Installation and Connections

Warning	60
Caution	60
Precautions	60
Installation	61
Connections	64

* US and foreign patents licensed from Dolby Laboratories.

WARNING

WARNING

This symbol means important instructions. Failure to heed them can result in serious injury or death.

DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISE WHILE DRIVING.

Failure to do so may result in an accident.

DO NOT DISASSEMBLE OR ALTER.

Doing so may result in an accident, fire or electric shock.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

KEEP SMALL OBJECTS SUCH AS BATTERIES OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.

Failure to do so may result in fire or electric shock.

DO NOT BLOCK VENTS OR RADIATOR PANELS.

Doing so may cause heat to build up inside and may result in fire.

USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.

Use for other than its designed application may result in fire, electric shock or other injury.

DO NOT PLACE HANDS, FINGERS OR FOREIGN OBJECTS IN INSERTION SLOTS OR GAPS.

Doing so may result in personal injury or damage to the product.

CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

HALT USE IMMEDIATELY IF A PROBLEM APPEARS.

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Centre for repairing.

DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY.

When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

KEEP FINGERS AWAY WHILE THE MOTORIZED FRONT PANEL OR MOVING MONITOR IS IN MOTION.

Failure to do so may result in personal injury or damage to the product.

⚠ WARNING

⚠ PRECAUTIONS

Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

Moisture Condensation

You may notice the Disc playback sound wavering due to condensation. If this happens, remove the disc from the player and wait about an hour for the moisture to evaporate.

Damaged Disc

Do not attempt to play cracked, warped, or damaged discs. Playing a bad disc could severely damage the playback mechanism.


Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

Never Attempt the Following

Do not grip or pull out the disc while it is being pulled back into the player by the automatic reloading mechanism.

Do not attempt to insert a disc into the unit when the unit power is off.

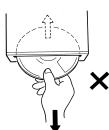

Inserting Discs


Your player accepts only one disc at a time for playback. Do not attempt to load more than one disc.

Make sure the label side is facing up when you insert the disc. Your player will automatically eject any disc that is inserted incorrectly. If the player continues to eject a correctly inserted disc, push the RESET switch with a pointed object such as a ballpoint pen.

Playing a disc while driving on a very bumpy road may result in skips, but this will not scratch the disc or damage the player.

New Discs

As a protective measure to prevent the CD from jamming, the CD player will automatically eject discs with irregular surfaces or inserted incorrectly. When a new disc is inserted into the player and ejected after initial loading, using your finger, feel around the inside of the centre hole and outside edge of the disc. If you feel any small bumps or irregularities, this could inhibit proper loading of the disc. To remove the bumps, rub the inside edge of the hole and outside edge of the disc with a ballpoint pen or other such instrument, then insert the disc again.

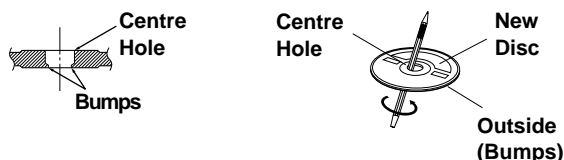

Irregular Shaped Discs

Be sure to use round shape discs only for this unit and never use any special shape discs.

Use of special shape discs may cause damage to the mechanism.




Installation Location

Make sure the IVX-C806/IVX-M706/CVA-1006R will not be installed in a location subjected to:

- Direct sun and heat
- High humidity and water
- Excessive dust
- Excessive vibrations

Correct Handling

Do not drop the disc while handling. Hold the disc so you will not leave fingerprints on the surface. Do not affix tape, paper, or gummed labels to the disc. Do not write on the disc.

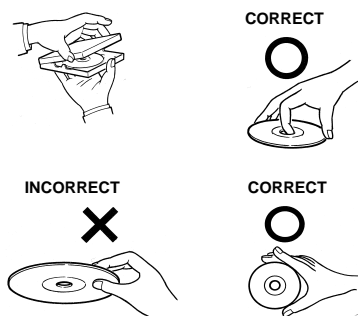

Disc Cleaning

Fingerprints, dust, or soil on the surface of the disc could cause the CD player to skip. For routine cleaning, wipe the playing surface with a clean, soft cloth from the centre of the disc to the outer edge. If the surface is heavily soiled, dampen a clean, soft cloth in a solution of mild neutral detergent before cleaning the disc.



Disc Accessories

There are various accessories available on the market for protecting the disc surface and improving sound quality. However, most of them will influence the thickness and/or diameter of the disc. Using such accessories can cause the disc to be out of standard specifications and may create operational problems. We recommend not using these accessories on discs played in Alpine CD players.



Transparent Sheet




Disc Stabilizer

New Discs

Before inserting an MD

Never install warped or irregular shaped MD into this unit. Use your finger to feel around the outer edge of the MD to make sure there are no irregularities. Inserting defective or damaged MD could severely damage the mechanism.

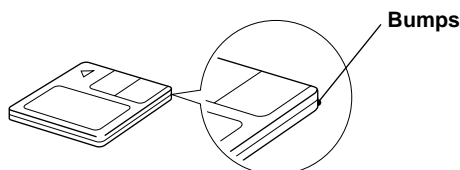

Using an MD

Check and ensure the following:

Under no circumstances should you open the MD's shutter and touch the inside of the disc. Do not expose the MD to direct sunlight. Place only 1 label in its proper position. Make sure the MD is clean before inserting into the player.

Sound Skips

Playing an MD while driving on a very bumpy road may result in skips, but this will not damage the player.

Handling the Detachable Front Panel

- Do not expose to rain or water.
 - Do not drop or apply shock.
-
- After turning the system off, a slight ghost of the image will remain temporarily. This is an effect peculiar to LCD technology and is normal.
 - Under cold temperature conditions, the screen may lose contrast temporarily. After a short warm-up period, it will return to normal.

Alpine products equipped with the Ai-NET bus, connected to the IVX-C806/IVX-M706/CVA-1006R, can be operated from the IVX-C806/IVX-M706/CVA-1006R. Depending on the products connected, the functions and displays will vary. For details, consult your Alpine dealer.



WARNING



Remove the anti-theft cover when you drive. This prevents the cover from falling off the unit and interfering with the safe operation of the vehicle.

Operation of some of the functions of this unit is very complex. Because of this, it was deemed necessary to place these functions into a special screen. This will restrict operation of these functions to times when the vehicle is parked. This ensures the focus of the driver's attention will be on the road and not on the IVX-C806/IVX-M706/CVA-1006R. This has been done for the safety of the driver and passengers.

Title Input and Audio Processor Adjustments cannot be made if the car is moving. The car must be parked and the parking brake must be engaged for the procedure described in the Owner's Manual to be valid. The warning "CAN'T OPERATE WHILE DRIVING;" will be displayed if any attempts are made to perform these operations while driving.

This operation is the same as when selecting sources using the remote control. When the car is parked, the selection is made as described in the Owner's Manual.

Basic Operation

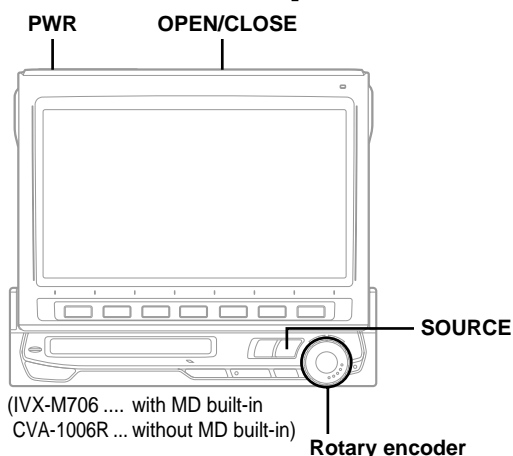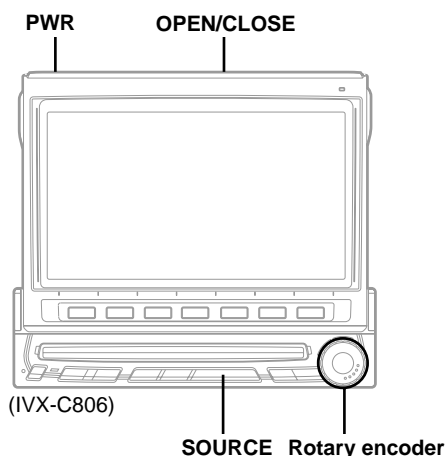

This section describes the basic operation of the radio. These operations also apply to the other sources.

- 1** Press the **PWR** (Power) button on the unit to turn the power on to the unit.
- 2** Press the **OPEN/CLOSE** button to open the monitor. The unit beeps 3 times and raises the monitor. The opening screen appears on the monitor.
- 3** Press the **SOURCE** button. The display shows the main menu screen.
- 4** Rotate the rotary encoder and select "RADIO" from the main menu.
- 5** Press the rotary encoder to execute the selection. The Radio mode screen is displayed.

NOTE

If **PAGE 1/2** or **PAGE 1/3** appears in the Function Guide menu, there are additional functions available for the selected source. Access these functions by pressing the **FUNC** button.

- 6** Press the **SOURCE** button again to select another source.

NOTES



- If a DVD player or DVD Changer is connected and its power is on, the display shows "**DVD**" or "**DVD-CHG**", "**AUX2**" instead of "**AUX1**" or "**AUX2**".
- If both the DVD player and DVD Changer are connected, the display shows "**DVD**" instead of "**AUX1**", and "**DVD-CHG**" instead of "**AUX2**".

Radio Mode Screen




The Function Guide displays the labels for each of the Function buttons. These labels will change depending upon the functions for the selected source.

Basic Operation

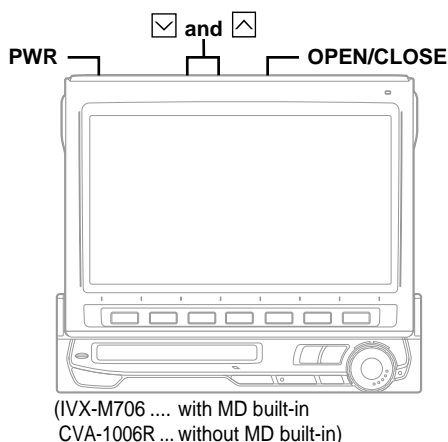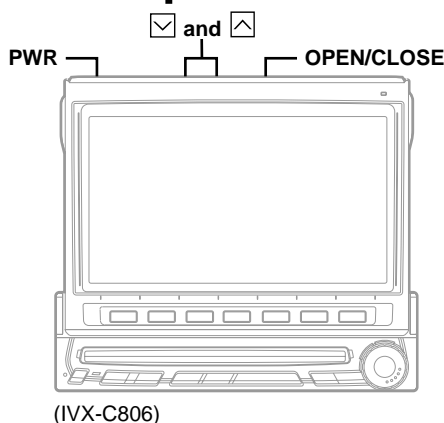

Using Face Cover

An anti-theft face cover is provided with the IVX-C806/IVX-M706/CVA-1006R. Put the face cover onto the IVX-C806/IVX-M706/CVA-1006R when you leave the vehicle. Be sure to remove the anti-theft face cover when you drive.

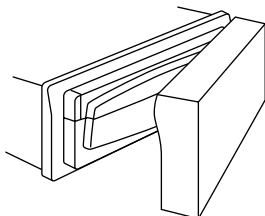

• Compatibility with Factory Steering Wheel Radio Controls

If your vehicle has steering wheel controls for the radio, an optional steering wheel control interface may be available to connect to your Alpine radio. For details, contact your Alpine dealer.


Raising the Monitor

- 1 Press the **OPEN/CLOSE** button. The unit beeps 3 times and raises the monitor automatically.

NOTES

- The IVX-C806/IVX-M706/CVA-1006R is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.
- If the monitor touches an obstacle while it is being raised, the unit will stop raising the monitor immediately. Should this occur, remove the obstacle and press the OPEN/CLOSE button again to lower the monitor.
- When the movable monitor is opened, do not place any object on the monitor and be careful not to bump or apply any pressure to the monitor while it is open. This can cause damage to the mechanism.
- Under low ambient temperature conditions, the display may be dark for a short period of time immediately after the power is turned on. Once the LCD has warmed up, the display will return to normal.
- For your safety, some operation of the unit cannot be performed while the vehicle is in motion. In this case, first stop the vehicle and engage the parking brake, then perform the operation.
- Operation of the remote control (described on pages 54-55) can be carried out even while the monitor screen is closed.

Initial System Start-UP

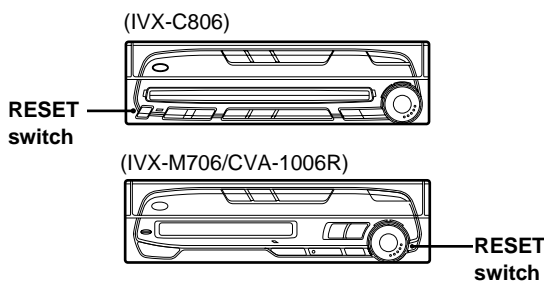

- 1 Immediately after installing or applying power to the unit, it should be initialized. Press the **RESET** switch with a ballpoint pen or any other pointed object.



Lowering the Monitor

- 1 Press the **OPEN/CLOSE** button.
The unit will beep 3 times and lower the monitor automatically.



NOTES

- The IVX-C806/IVX-M706/CVA-1006R is a precision device. With gentle handling, its unique capabilities can be enjoyed for a long time.
- If the monitor touches an obstacle while it is being lowered, the unit will stop lowering the monitor immediately.
Should this occur, remove the obstacle and press the **OPEN/CLOSE** button again to lower the monitor.

Turning Power On or Off

- 1 Press the **PWR** (Power) button to turn on the unit.
The opening screen appears automatically.

NOTE

The unit can be turned on by pressing any button on the unit except the **MUTE**, **OPEN/CLOSE** and   (**ANGLE**) buttons.

- 2 Press the **PWR** (Power) button again to turn off the unit.

NOTES

- Some of this unit's functions, cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake, before attempting these operations.
- The IVX-C806/IVX-M706/CVA-1006R draws minimal current even when its power switch is turned off. If the switched power (ignition) lead of the IVX-C806/IVX-M706/CVA-1006R is connected directly to the positive (+) post of the vehicle's battery, the battery may be discharged. If this lead is unswitched, it must be disconnected from the battery post should the vehicle be left unused for an extended period of time.
An SPST (Single-Pole, Single-Throw) switch (sold separately) can be added to simplify this procedure. Then, you can simply place it in the **OFF** position when you leave the vehicle. Turn the SPST switch back **ON** before using the IVX-C806/IVX-M706/CVA-1006R. For connecting the SPST switch, refer to "Connection Diagram of SPST switch" on page 63.
- Some operation of the unit cannot be performed while the vehicle is in motion. In this case, be sure to first stop your vehicle and apply the parking brake, then perform the operation.



Selecting the Monitor Opening Angle

The monitor opening angle can be set in 2 positions.


 
- 1 Press and hold the **OPEN/CLOSE** button for at least 2 seconds while the monitor is being raised. Each press changes the monitor angle back or forth.

Adjusting the Monitor Viewing Angle



Adjust the monitor's angle for better visibility.

- 1 Press the  and  buttons to adjust the monitor's angle so the screen will be in the best viewing position. Each press of the buttons produces a beep and changes the screen angle between 80 and 104 degrees.

NOTES

- If the monitor touches an obstacle while the angle is being adjusted the unit will stop the screen immediately.
Should this happen, remove the obstacle and press the  or  button again.
- The screen colour will vary when viewed at certain angles. Adjust the screen angle for the best viewing position.
- If the voltage of the vehicle's battery power is low, the screen may blink when the screen angle is changed. This is normal and not a malfunction.

Basic Operation

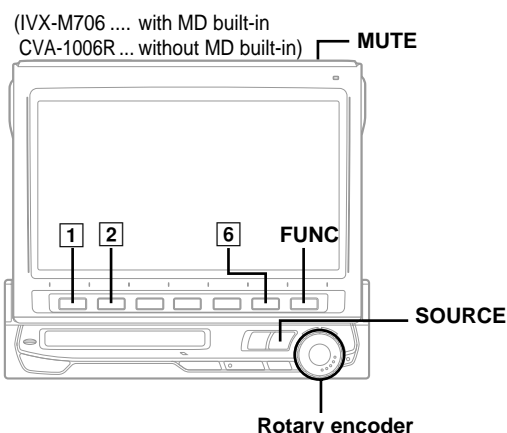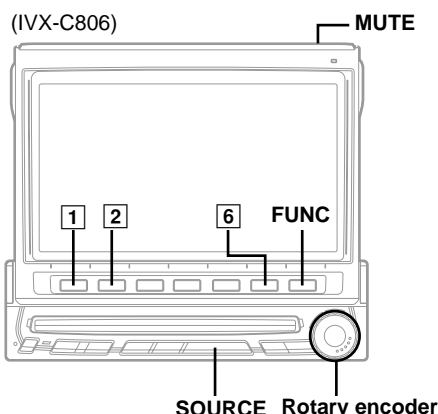

Adjusting the Volume/Bass/Treble/Balance (Between Left and Right)/Fader (Between Front and Rear)

- 1 Press the rotary encoder repeatedly until the mode you wish to adjust is obtained. Each press changes the modes as follows:

→ **BAS.** → **TRE.** → **BAL.** → **FAD.** → **VOL.**

The volume level can be adjusted at any time by just rotating the rotary encoder.

NOTE

When the subwoofer mode is ON, its level may also be adjusted.

- 2 Rotate the rotary encoder to set to the desired sound within 5 seconds after selecting the mode.

NOTE

If the rotary encoder is not turned or pressed within 5 seconds after selecting the **BAS.** (Bass), **TRE.** (Treble), **BAL.** (Balance), or **FAD.** (Fader), the unit automatically defaults back to the **VOL.** (Volume) mode.

Audio Mute Function

Activating this function will instantly lower the volume level by 20 dB.

- 1 Press the **MUTE** button to activate the MUTE mode. The audio level will decrease by about 20 dB.
Pressing the **MUTE** button again will bring the audio back to its previous level.

Turning Loudness On or Off

Loudness introduces a special low- and high-frequency emphasis at low listening levels. This compensates for the ear's decreased sensitivity to bass and treble sound.

NOTE

When an equalizer or digital sound processor is connected, this function is inoperative.

- 1 Press and hold the rotary encoder for at least 2 seconds to switch between the Loudness On and Off modes.


Adjusting Source Signal Levels

If the difference in volume level between the CD/MD player and FM radio is too great, adjust the FM signal level as follows.


- 1 Press the **SOURCE** button.
The main menu screen appears in the display.
- 2 Press the [6] (SETUP) button.
The Setup mode screen is displayed.
- 3 Rotate the rotary encoder and select "FM LEVEL." The Function Guide appears on the display.
- 4 Press the [1] (LOW) or [2] (HIGH) button to make the signal levels between the FM band and CD/MD player closer.
- 5 Press the **FUNC** (RETURN) button to return to the main menu screen.

Radio Operation

(IVX-C806)

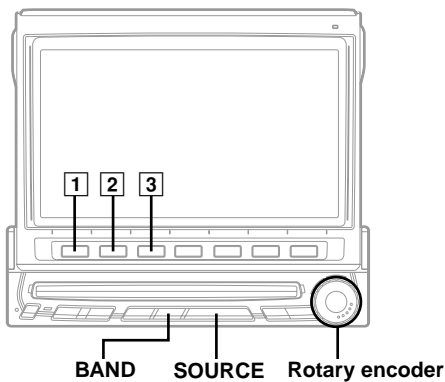

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

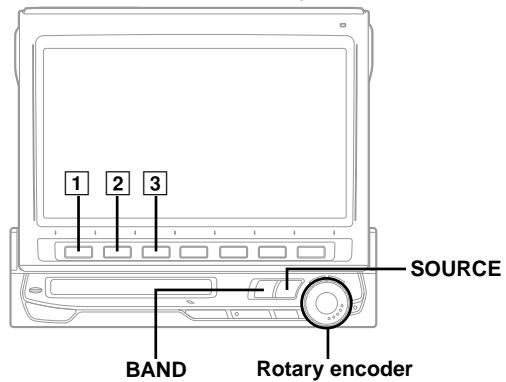

Manual Tuning

- 1** Press the **SOURCE** button after turning on the power.
The main menu screen appears.
- 2** Rotate the rotary encoder to scroll the bottom menu and select "RADIO," then press the rotary encoder.
The radio mode is activated and the display changes to the Radio Mode screen.
- 3** Press the **BAND** button to select the desired radio band. Each press changes the bands as follows:
→ **FM1** → **FM2** → **FM3** → **MW** → **LW** →
- 4** Press the **[2]** (TUNE) button to choose the manual tuning mode. Each press changes the function modes for the buttons **[1]** and **[3]** as follows:
→ **Distance** → **Local** → **Manual** →
- 5** Press the **[1]** (◀◀) or **[3]** (▶▶) button to change the radio frequency downward or upward respectively. Each press changes the frequency by one step. When the button is pressed and held, the frequency changes continuously until the button is released.

NOTE

When a stereo FM station is tuned in, the **STEREO** indicator appears in the display.

Automatic Seek Tuning

- 1** Press the **BAND** button repeatedly to select the desired radio band, FM, MW or LW.
- 2** Press the **[2]** (TUNE) button to select the desired mode, DX or Local. Each press changes as follows:

→ **Distance** → **Local** → **Manual** →

There are two modes you can select for auto tuning, DX and Local:

- DX (Distance) mode (with DX SEEK indicator ON);
Both strong and weak stations will be tuned in.
 - Local mode (with SEEK indicator ON);
Only strong stations will be tuned in.
- The initial setting is DX.


- 3** Press the **[1]** (◀◀) or **[3]** (▶▶) button to automatically seek a radio station downward or upward respectively.
When the unit finds a station, it stops. To automatically seek next station, press the same button again.

NOTE


When a stereo FM station is tuned in, the **STEREO** indicator appears in the display.

Radio Operation

(IVX-C806)

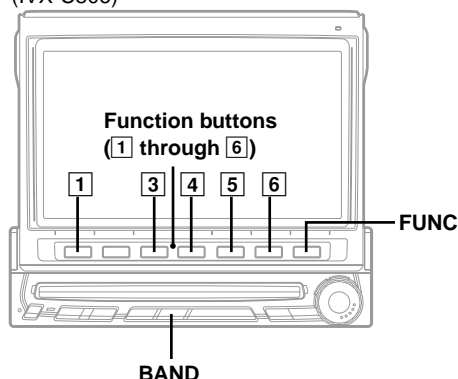

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

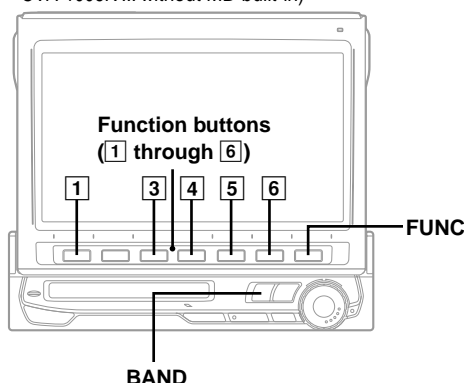

Mono/Stereo Switching

Use the Mono (monaural) mode to reduce the noise level of noisy stereo broadcast due to weak signal.

- 1** Press the **[4]** (MONO) button in the radio mode. "STEREO" indicator disappears and the monaural mode activates.
- 2** To return to the stereo mode, press the **[4]** (MONO) button again.

NOTE

"STEREO" indicator appears when a stereo station is tuned in.

Manual Storing of Station Presets

- 1** Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.
Press the **FUNC** (PAGE 1/2) button.
- 2** Press and hold any one of the **Function buttons** **[1]** (P.SET1) through **[6]** (P.SET6) for at least 2 seconds. The Function Guide indicators in the display, P.SET1 through P.SET6, will blink for 5 seconds.

- 3** While the P.SET1 through P.SET6 indicators in the display are blinking, press the **Function button** into which you wish to store the station (within 5 seconds). The indicators in the display stop blinking, showing that the station has been memorized at the Preset button pressed.
- 4** Repeat the above procedure (1 to 3) to store up to 5 other stations onto the same band.
To use this procedure for other bands, simply select the band desired and repeat the procedure.

A total of 30 stations can be stored in the preset memory (6 stations for each band; FM1, FM2, FM3, MW or LW).

NOTE

If a preset memory has already been set in the same Function button, it will be cleared and the new station will be memorized.

Automatic Memory of Station Presets

The tuner can automatically seek and store 6 strong stations in the selected band in order of signal strength.

- 1 Press the **BAND** button in the radio mode to select the desired radio band.
- 2 Press the **[6]** (A.MEMO) button.
The tuner automatically seeks and stores 6 strong stations into the **[1]** (P.SET1) to **[6]** (P.SET6) buttons in order of signal strength. When the automatic storing has been completed, the tuner goes to the station stored in the **[1]** (P.SET1) button.

NOTE

If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.

Tuning to Preset Stations

You can tune in the preset stations in memory on each band using the Function buttons.

- 1 Press the **BAND** button in the radio mode to choose the desired radio band.
Each press changes the radio bands.
- 2 Press the **Function button** **[1]** (P.SET1) through **[6]** (P.SET6) that has your desired preset station in memory. The preset station is received.

T.R.V.S. Search for Local Stations

Using the T.R.V.S. feature of this unit, you can automatically seek and memorize up to 12 local stations (max.) in a memory separate from your regular preset memory. This keeps the currently preset stations you normally listen to, intact.



- 1 Press the **BAND** button in the radio mode and select the desired radio band.
- 2 Press the **[5]** (T.R.V.S.) button to activate the T.R.V.S. mode. The unit will automatically search and store up to 12 receivable, local stations.

NOTE

If no stations are memorized, the display shows "NO MEMORY."

- 3 Press the **[1]** (◀ P.DN) or **[3]** (P.UP ▶) button and select your desired station.
- 4 To deactivate the T.R.V.S. mode, press the **[5]** (T.R.V.S.) button.

RDS Operation

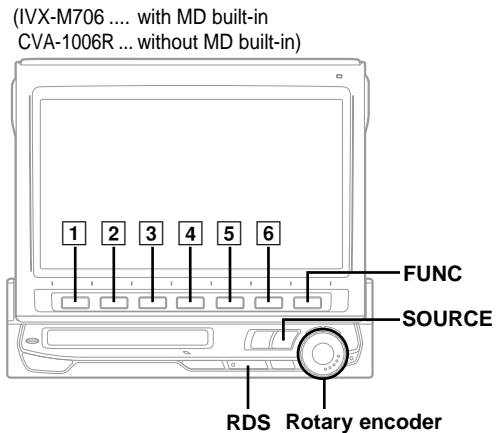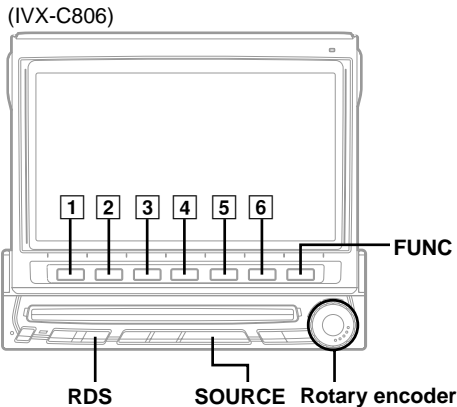

Turning AF (Alternative Frequencies) On or Off

The RDS (Radio Data System) is a radio information system using the 57 kHz subcarrier of regular FM broadcast. The RDS allows you to receive a variety of information such as traffic information, station names, and to automatically re-tune to a stronger transmitter that is broadcasting the same programme.

- 1** Press the **RDS** button in the FM radio mode. The display changes to the RDS setting screen.
- 2** Press the **[3]** (AF) button to select the AF (Alternative Frequencies) ON or OFF mode.
 - When the AF ON mode is selected, the unit automatically tunes to a strong signal station in the AF list.
 - When the RDS station signal received has become weak in the AF seek mode, press and hold the **[3]** (AF) button for at least 2 seconds to have the unit automatically seek a stronger station in the AF list.
 - Use the AF OFF mode when automatic re-tuning is not required.
- 3** Press the **FUNC** (RETURN) or **RDS** button to return to the radio mode.

NOTE

To display the RDS Setting (information) screen in other mode than FM radio band, for example, press the RDS button.

Tips

The RDS digital data includes the followings:

PI	Programme Identification
PS	Programme Service Name
AF	List of Alternative Frequencies
TP	Traffic Programme
TA	Traffic Announcement
PTY	Programme Type
EON	Enhanced Other Networks

Receiving RDS Regional (Local) Stations

- 1** Press the **SOURCE** button in the FM radio mode.
The display shows the main menu screen.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears in the display.
- 3** Rotate the rotary encoder and select "REG."
The Function Guide menu is displayed.
- 4** Press the **[1]** (OFF) or **[2]** (ON) button to turn off or on the REG (Regional) mode.
In the REG OFF mode, the unit automatically keeps receiving the related local RDS station.
- 5** Press the **FUNC** (RETURN) button to return to the previous screen.

Receiving Traffic Information

- 1 Press the **RDS** button.
The display changes to the RDS setting screen.
- 2 Press the **[4] (T.INFO)** button to turn on the Traffic Information mode.
- 3 Press the **FUNC (RETURN)** or **RDS** button to return to the radio mode screen.
- 4 Press the **[1] (◀◀)** or **[3] (▶▶)** button and select the desired traffic information station. When the traffic information station is tuned in, the TP indicator lights up.

Traffic information is heard only when it is being broadcast. If traffic information is not being broadcast, the unit is set in the standby mode. When a traffic information broadcast begins, the unit automatically receives it and the display shows "Traffic Info."

When traffic information broadcast is over, the unit will automatically set in the standby mode.

NOTES

- If the traffic information broadcast signal falls below a certain level, the unit remains in the receiving mode for 1 minute. If the signal remains below a certain level for over 70 seconds, the "TP OFF" indicator appears in the display.
- If you do not want to listen to the traffic information being received, lightly press the **[4] (T.INFO)** button to skip that traffic information message. The T. INFO mode will remain in the ON position to receive the next traffic information message.
- If the volume level is changed while receiving traffic information, the changed volume level will be memorized. When traffic information is received next time, the volume level will be automatically adjusted to the level memorized.

PTY (Programme Type) Tuning

- 1 Press the **RDS** button. The display changes to the RDS Setting Screen.
- 2 Press the **[5] (PTY)** button to activate the PTY mode. The Programme Type of the station being currently received will be displayed for 5 seconds.

NOTE


If no button is pressed within 5 seconds after pressing the **[5] (PTY)** button, the PTY mode will be automatically cancelled.

- 3 Press the **[1] (◀ BACK)** or **[2] (NEXT ▶)** button within 5 seconds after activating the PTY mode to choose the desired programme type while "PTY" (programme type) is being displayed. Each press scrolls the programme type by one.
- 4 Press the **[5] (PTY)** button within 5 seconds after selecting the programme type to start searching for a station in the selected programme type.


If no station is found, "NO PTY" will be displayed.
- 5 Press the **FUNC (RETURN)** button to return to the radio mode screen.

RDS Operation

(IVX-C806)

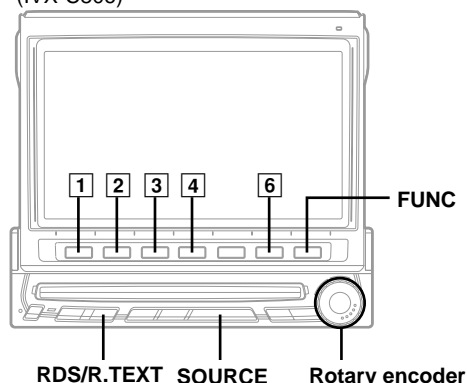

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

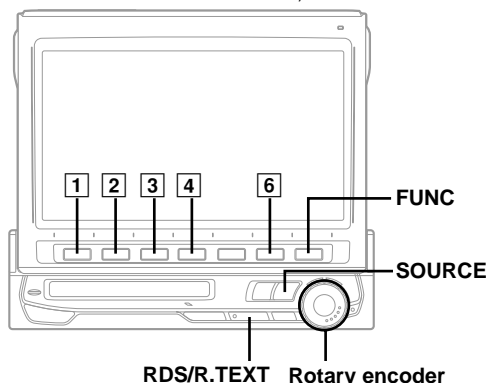

Receiving Traffic Information While Playing CD/MD/Radio

- 1** Press the **RDS** button. The display changes to the RDS Setting screen.
- 2** Press the **4** (T.INFO) button to select a traffic information station.
- 3** Press the **FUNC** (RETURN) or **RDS** button. The display returns to the previous source screen.
- 4** To end the traffic information mode, press the **RDS** button. The display changes to the RDS Setting screen.
- 5** Press the **4** (T.INFO) button to turn off.
- 6** Press the **FUNC** (RETURN) button to return to the previous source screen.
- 7** To select the desired **traffic information station**, first display the radio mode screen and press the **1** (◀◀) or **3** (▶▶) button to select the desired traffic information station.
 - When the traffic information broadcast starts, the unit automatically mutes the CD/MD player or the regular FM broadcast.
 - When the traffic information broadcast finishes, the unit automatically returns to the original source you were playing before the traffic information broadcast began.

• When traffic information stations cannot be received:

In the CD/MD mode:

When the TP signal can no longer be received, the traffic information station of another frequency will be selected automatically.

NOTE

The receiver is equipped with the EON (Enhanced Other Networks) function so if the station being received does not broadcast the traffic information, the receiver automatically tunes in the related station that broadcasts the traffic information.

- 8** When the desired traffic information station has been selected, switch to the desired source mode screen, CD/MD or Radio.

Priority PTY (Programme Type)

This function allows presetting of a programme type such as music category, news, etc. You can listen to a programme in the preset programme type as the unit automatically gives priority to the preset programme type when it begins broadcasting, and interrupts the programme you are currently listening. This feature is functional when your unit is set to a mode other than the LW and MW modes.

- 1 Press the **RDS** button.
The display changes to the RDS Setting Screen.
- 2 Press the **[6]** (P.PTY) button to activate the PRIORITY PTY mode.
The programme type selected by the P.PTY is displayed for 5 seconds.

NOTE

*If no button is pressed within 5 seconds after pressing the **[6]** (P.PTY) button, the PRIORITY PTY mode is automatically cancelled.*

- 3 Press the **[1]** (◀ BACK) or **[2]** (NEXT ▶) button within 5 seconds to choose a desired programme type. Then press **[6]** (P.PTY) button. The PRIORITY PTY function will activate. The "P.PTY" indicator lights up.

NOTE

*When the P.PTY mode is set to the ON position, the unit automatically plays the preset programme type whenever the unit receives the programme type even while the unit is displaying other source screen than radio.
If you do not want to listen to the programme being received, press the **[6]** (P.PTY) button to skip the P.PTY mode. The P.PTY mode will remain in the P.PTY ON position to receive the next preset programme type when it occurs.*

- 4 Press and hold the **[6]** (P.PTY) button for at least 2 seconds to turn on the Priority PTY (interrupting) mode.
 - To disable the PRIORITY PTY (interrupting) function, press and hold the **[6]** (P.PTY) button for more than 2 seconds.

NOTE

In the PRIORITY PTY function, unlike in the T.INFO function, the volume does not increase during operation.

- 5 Press the **FUNC** (RETURN) button to return to the previous screen.

Turning Emergency Alarm Display On or Off

- 1 Press the **SOURCE** button.
The display shows the main menu screen.
- 2 Press the **[6]** (SETUP) button.
The Setup mode screen appears in the display.
- 3 Rotate the rotary encoder and select "PTY31."
The Function Guide menu is displayed.
- 4 Press the **[1]** (OFF) or **[2]** (ON) button to select the PTY31 Off or On mode.
In the PTY31 On mode, the unit will show "ALARM" in the display when the unit receives the PTY31 (Emergency Broadcast) signal.

NOTE

If emergency broadcast is received, the unit changes to the radio mode even while you are playing a source other than radio.

- 5 When your selection has been made, press the **FUNC** (RETURN) button to return to the main menu screen.

Displaying Radio Text

Text messages from a radio station can be displayed.


- 1 Tune in a radio station that transmits text messages.
- 2 Press and hold the **R.TEXT** button for at least 2 seconds in the FM radio mode to activate the Radio Text mode.
The display shows "R/T WAIT" for a few seconds.
- 3 To deactivate the Radio Text mode, press and hold the **R.TEXT** button for at least 2 seconds.

NOTE


If there is no receivable text message or the unit cannot receive a text message properly, the display shows "NO TEXT."

CD player Operation (IVX-C806 only) (IVX-M706/CVA-1006R.....optional)

(IVX-C806)

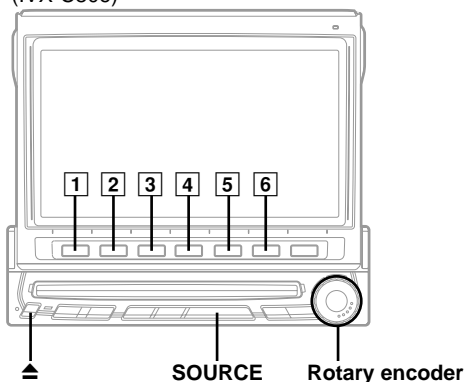

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

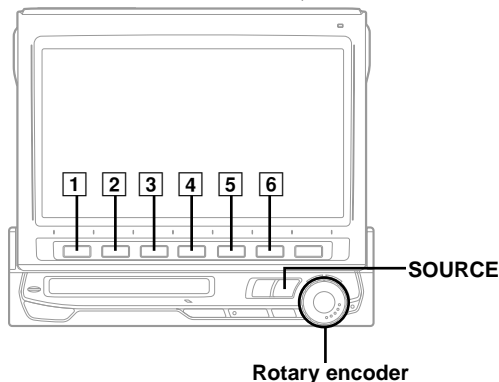

Playback

Only IVX-C806 has a built-in CD player.
When an optional Alpine CD player or CD Changer is connected, you can control it from the IVX-C806/IVX-M706/CVA-1006R.
(When a CD Changer is connected, see page 21 to select your desired disc.)

	IVX-C806	IVX-M706	CVA-1006R
built-in CD	○	×	×
Slave CD player	Option	Option	Option
CD Changer	Option	Option	Option

- 1 Press the **SOURCE** button to display the main menu screen.
- 2 Rotate the rotary encoder and select the CD player mode. Then, press the rotary encoder to execute the selection.
The display shows the CD player mode screen.

When a CD is inserted into the CD SLOT of the IVX-C806, with the label side facing up, the unit starts to play the CD.

IVX-M706/CVA-1006R:

When an optional Alpine CD player is connected, inserting an CD into the optional CD player starts playback automatically.

- 3 To temporarily pause playing, press the [2] (▶||) button.
To resume play, press the [2] (▶||) button for a second time.

- 4 Press the eject (▲) button when you want to eject the CD. (If you use an optional CD player, press the eject button on the optional CD player.)

NOTES (IVX-C806 only)

- Three-inch (8 cm) CD's can be used.
- Only compact discs containing the mark shown can be used.



- We cannot fully guarantee the playback of CD-R (CD-Recordable). You cannot playback CD-RW (CD-ReWritable) on this unit.
- Be sure to turn the ignition key to the ACC or ON position before inserting an CD. Otherwise it may cause damage to the player.

Fast Forward and Backward

- 1 Press and hold the [3] (▶▶) or [1] (◀◀) button to quickly move forward or backward respectively to reach the desired music section on the disc. Release the button when the desired section is reached.

Music Sensor (Skip)

This feature allows you to go to the beginning of a track.

- 1 Lightly press the [1] (◀◀) button during the CD play to return to the beginning of the current track.

If you wish to return to the beginning of a track further back, repeatedly press the [1] (◀◀) button until the desired track is reached.

Lightly press the [3] (▶▶) button during the CD play to advance to the beginning of the next track. If you wish to advance to the beginning of a track further ahead, repeatedly press until the desired track is reached.

Repeat Play

- 1 Press the [4] (REPEAT) button while the track that you want to play repeatedly is playing. The track will be repeatedly played until the repeat mode is cancelled.

To cancel the repeat play, press the [4] (REPEAT) button until the REPEAT indicator disappears.

NOTE

If a CD Changer is connected and the REPEAT ALL mode is selected, the unit repeatedly plays back all tracks on the disc selected.

M.I.X. (Random) Play

In the M.I.X. mode, the tracks on the disc will be played back in a random sequence.

- 1 Press the [5] (M.I.X.) button in the CD mode. All the tracks on the disc will be played back in a random sequence. The M.I.X. play continues until the M.I.X. mode is cancelled. To cancel the M.I.X. play, press the [5] (M.I.X.) button repeatedly until the M.I.X. indicator disappears.

NOTES

- If a CD Changer equipped with the M.I.X. ALL function is connected, M.I.X. ALL will also be selectable. In this mode, the tracks on all the CDs in the current magazine will be included in the random playback sequence.
- During M.I.X. play, Repeat Play for a single track will be disabled.

Displaying and Scrolling CD Title/Text

If titles have been memorized for CDs, the CD titles can be shown on the display (for titling CDs, see "Titling CDs" on page 41). The text for the CD titles/tracks can be displayed and scrolled while you are playing a music CD with title/text.

- 1 Press the [6] (SCROLL) button during CD play. Each press changes between the CD title scrolling mode and track title scrolling mode. Description of "Title" and "Text":
 - Title; this unit allows you to title (name) CDs (see page 41).
 - Text; Some CDs have pre-recorded text information for the CD/track names etc.

NOTES

- If either of the disc and track titles is unavailable, the space for that title in the display will be left blank.
- If both of the disc and track titles are unavailable, the display will show "NO TITLE."
For the MD player, the same display as above will be shown.


- 2 If the text/title is longer than 12 characters, press and hold the [6] (SCROLL) button for at least 2 seconds to scroll the text/title.

To stop the scrolling, press and hold the [6] (SCROLL) button for at least 2 seconds.

NOTES

- Depending on the character styles, characters may not be displayed correctly.
- The unit might automatically scroll the text.
- Text can only be displayed on CD changers that are enabled with CD TEXT.

CD player Operation (IVX-C806 only) (IVX-M706/CVA-1006R.....optional)

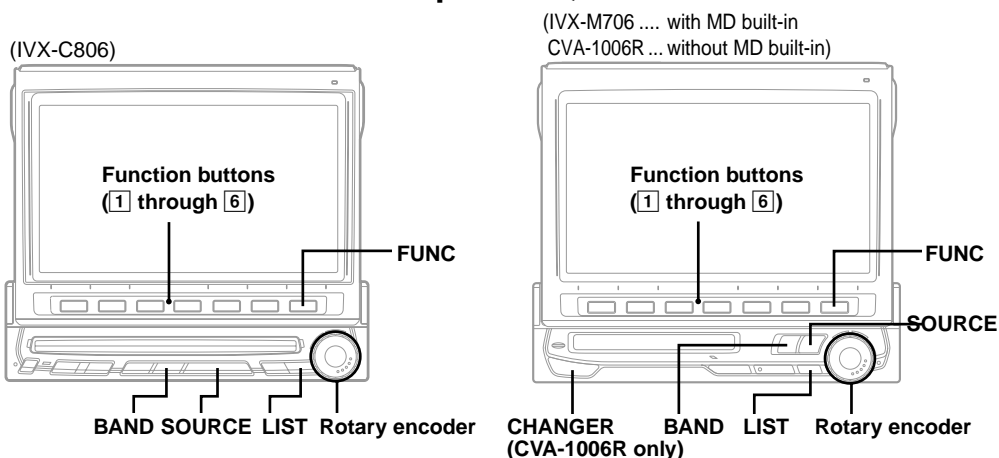

Displaying List of Track Titles/CD Titles

If CD titles have been memorized, you can select a CD from the CD title list.

When CD text discs are inserted into the CD player (for IVA-C806 only), you can select a track from the displayed list of track titles.

(For memorizing titles, see page 41.)

- 1** Press the **LIST** button in the CD/CD Changer mode.
 CD (built-in player) mode:
 If the titles have been memorized for CDs, the list of CD titles can be displayed.
 When CD text discs are inserted. The list of Track titles will be displayed.
 CD Changer/CD (when connected to the CD player) mode:
 If the titles have been memorized for CDs, the list of CD titles can be displayed.
- 2** Rotate the rotary encoder and select (highlight) your desired track title or CD title to play.
- 3** Press the rotary encoder to execute the selection.
 The selected title plays, the title list screen closes, and the CD mode main screen or CD Changer mode main screen appears.

NOTES

- If the disc is not titled, the display shows "NO TITLE CD." If no disc is loaded, the display shows "NO DISC."
- Pressing the **LIST** or **FUNC** (RETURN) button while the list of the disc titles is being displayed, changes the display back to the CD/CD Changer mode screen.
- **IVX-C806:**
 Pressing the **[2]** button displays the title list or the track title list only when a CD with text is loaded in the built-in CD player.
- **IVX-M706:**
 Pressing the **[1]** button toggles between the MD track title list screen and CD title list screen.
- **CVA-1006R:**
 When a CD player or CD Changer is connected, pressing the **[1]** button displays the CD title list.

Controlling CD Changer (Optional)

An optional 6-disc or 12-disc CD Changer may be connected to the IVX-C806/IVX-M706/CVA-1006R if it is Ai-NET compatible. With a CD Changer connected to the Ai-NET input of the IVX-C806/IVX-M706/CVA-1006R, the CD Changer will be controllable from the IVX-C806/IVX-M706/CVA-1006R.

Using the KCA-400C (the Multi-Changer Switching device) multiple changers can be controlled by the IVX-C806/IVX-M706/CVA-1006R.

See the Multi-Changer Selection section on this page for selecting the CD Changers.

* You can directly select the CD Changer mode by pressing the **CHANGER** (CVA-1006R) button.

- 1 Press the **SOURCE** button to display the main menu.
- 2 Rotate the rotary encoder to select "CD CHG," then press the rotary encoder.
The display changes to the CD Changer mode screen.

- 3 When a 6-Disc CD Changer is connected:

Press the **FUNC** (PAGE 1/2) button. The Function Guide display changes.

Press the Function buttons to select your desired disc loaded. The Function buttons [1] (DISC1) through [6] (DISC6) select the discs from the first disc to 6th disc. For example, press the [3] (DISC 3) button to select the third disc.

NOTE

To select your desired track number on the selected disc, lightly press the [1] (◀◀) or [3] (▶▶) repeatedly until your desired track number is displayed.

When a 12-Disc CD Changer is connected:

You can select the disc numbers 1 to 6 in the same manner as for 6-disc Changer.

Press the **FUNC** (PAGE 1/3) button twice to select the disc numbers 7 to 12. The Function Guide display changes and now the Function buttons [1]-[6] represent disc numbers 7-12. Press the **Function buttons** ([1] through [6]) to select your desired disc. For example, to select 9th disc, press [3] (DISC 9) button.

NOTES

- To select your desired track number on the selected disc, lightly press the [1] (◀◀) or [3] (▶▶) repeatedly until your desired track number is displayed.
- After selecting the desired, you can operate in the same way as for the CD player. For details please see the CD player operation section.
- * If both the CD Changer and DVD Changer are connected, each pressing of the CHG (CHANGER) button changes between the CD Changer mode and the DVD Changer mode.

Multi-Changer Selection

Alpine's Ai-NET system will support up to 6 CD Changers. When operating two or more changers, the KCA-400C (Multi-Changer Switching device) must be used. If you use 1 Switching device, you can connect up to 4 CD Changers. If you use 2 Switching devices, you can connect up to 6 CD Changers.

- 1 Press the **SOURCE** button to display the main menu.
- 2 Rotate the rotary encoder to select changer 1-4 (when one KCA-400C is connected) or changer 1-6 (when two KCA-400Cs are connected). Then press the rotary encoder.
The display shows the selected CD Changer mode screen.

NOTE

When one KCA-400C is connected to the changer, "Changer 1-4" is displayed in the main menu. When two KCA-400Cs are connected to the changer, "Changer 1-6" is displayed in the main menu.

- 3 In changer mode, you can select the next changer (connected changers only) by pressing the **BAND** button on the unit or on the remote.


NOTE

You cannot operate this function in the title display or Title inputting display.


- 4 To operate the selected changer, see "CD Player Operation" section.

MD player Operation (IVX-M706 only) (IVX-C806/CVA-1006R....optional)

(IVX-C806)

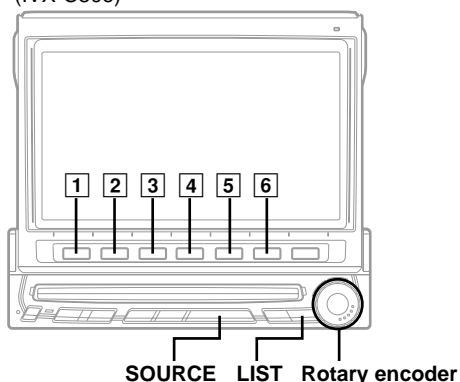

(IVX-M706 with MD built-in
CVA-1006R without MD built-in)

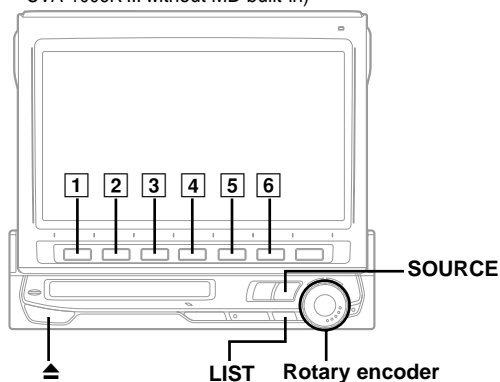


Playing Mini-Disc (MD)

IVX-M706 has a built-in MD player. This section describes operation assuming that an Alpine MD player is connected.

(When the MDA-5051R is connected with the IVX-C806/IVX-M706/CVA-1006R, MDs can only be played back.)

	IVX-C806	IVX-M706	CVA-1006R
built-in MD	×	○	×
Slave MD Player	Option	Option	Option

- 1 Press the **SOURCE** button.
The main menu appears on the display.
- 2 Rotate the rotary encoder and select "MD" from the main menu, then press the rotary encoder to execute the selection.
The MD player mode screen appears on the display.

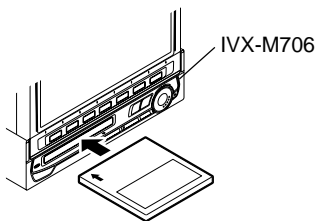

When an MD is inserted into the MD SLOT of the IVX-M706, with the label side up, the unit starts to play the MD.

When an optional Alpine MD player is connected, inserting an MD into the optional MD player starts playback automatically.

NOTE

Before inserting an MD, use your finger to feel around the MD cartridge. If you feel any small bumps or irregularities, remove them because these may cause a malfunction or damage to the player.

- 3 Press the [2] (▶/||) button to temporarily pause play. To resume play, press the [2] (▶/||) button for a second time.
- 4 Press the eject (▲) button when you want to eject the MD. (If you use an optional MD player, press the eject button on the optional MD player.)

NOTES (IVX-M706 only)

- The player accepts only one MD at a time for playback. Do not attempt to load more than one MD.
- Before inserting an MD, make sure that the MD cartridge is clean and not warped. If it is dirty, wipe it clean as dust or dirt may cause a malfunction of the player.
- Never touch the surface of the MD itself by opening the shutter on the cartridge.
- Do not insert any MD with stacked labels or label peeling off.
- Be sure to turn the ignition key to the ACC or ON position before inserting an MD. Otherwise it may cause damage to the player.

Music Sensor (Skip)

- 1 Momentarily press the [1] (◀◀) button once to return to the beginning of the current track. If you wish to access the beginning of a track further back, repeatedly press until you reach the desired track.
- 2 Press the [3] (▶▶) button once to advance to the beginning of the next track. If you wish to access the beginning of a track further ahead, press repeatedly until the desired track is reached.

Fast Forward and Backward

- 1 Press and hold the [1] (◀◀) or [3] (▶▶) button to quickly move backward or forward until you reach the desired section of the track. When you reach the desired section, release the button. The player starts playing from that section.

Repeat Play

- 1 Press the [4] (REPEAT) button to play back repeatedly the track being played. The REPEAT indicator appears and the track plays repeatedly. Press the [4] (REPEAT) button repeatedly until the REPEAT indicator disappears to deactivate the repeat play.

M.I.X. (Random) Play

- 1 Press the [5] (M.I.X.) button in the play or pause mode. The M.I.X. indicator will illuminate and the tracks on the disc will be played back in a random sequence. After all the tracks on the disc have been played back once, the player will begin a new random sequence play until the M.I.X. mode is deactivated. To stop the M.I.X. play, press the [5] (M.I.X.) button repeatedly until the M.I.X. indicator disappears.

Scrolling Displayed Titles

With IVX-M706 built-in MD or IVX-C806, CVA-1006R connected, the MD player can scroll titles (disc or track names) having up to a maximum of 32 characters.

- 1 Press the [6] (SCROLL) button repeatedly while an MD is being played. Each press toggles between the MD title scrolling and track title scrolling.
- 2 Press and hold the [6] (SCROLL) button for at least 2 seconds to start the auto scrolling. The title will be scrolled repeatedly. To deactivate the auto scrolling, press and hold the [6] (SCROLL) button for at least 2 seconds.

NOTES

- Depending on the MD deck used for recordings/ inputting titles, the characters may not be displayed correctly.
- If the MD title or track titles are not memorized, the unit displays "NO TITLE."


Displaying List for Track Titles/ MD Titles

- 1 Press the **LIST** button in the MD player mode. The list of the Track Titles/ MD titles appears in the display.
MD (built-in player) mode:
The list of Track Titles will be displayed.
MD (when connected to the MD Player):
The list of MD Titles will be displayed.
- 2 Rotate the rotary encoder to select the desired title by moving the cursor to that title.
- 3 Press the rotary encoder to execute the selection.
The selected Track or MD title will be played back and the MD player mode screen will appear.


NOTES

- If the MD is not titled, the display shows "NO TITLE MD." If no MD is loaded, the display shows "NO DISC."
- Pressing the **LIST** or **FUNC (RETURN)** button while the list of the titles is being displayed changes the display back to the MD player mode screen.
- IVX-C806:
Pressing the [2] button displays the CD title list or the track title list only when a CD with text is loaded in the built-in CD player.
- IVX-M706:
Pressing the [1] button toggles between the MD track title list screen and title list screen.
- CVA-1006R:
When a CD/MD player or CD Changer is connected, pressing the [1] button displays the title list.

DVD/Video CD/CD Player/DVD Changer Operation (Optional)

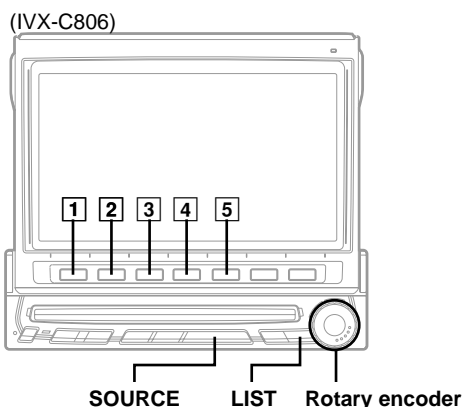

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

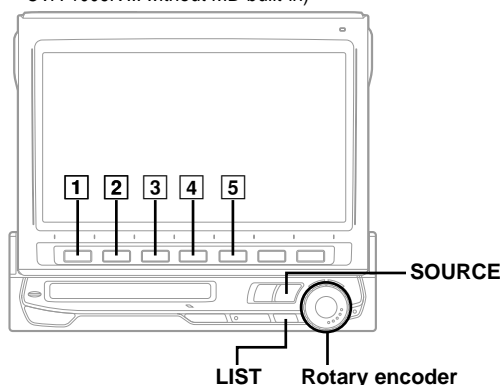

Playing DVD/Video CD/CD

If an optional Alpine DVD/video CD/CD player is connected to the IVX-C806/IVX-M706/CVA-1006R, you can control it from the IVX-C806/IVX-M706/CVA-1006R.

WARNING

It is dangerous (and illegal in many states) for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the IVX-C806/IVX-M706/CVA-1006R correctly so that the driver cannot watch TV/Video unless the vehicle is stopped and the emergency brake is applied.

If the IVX-C806/IVX-M706/CVA-1006R is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.

- 1 Press the **SOURCE** button to display the main menu screen.
- 2 Rotate the rotary encoder and select "DVD" from the menu. Then, press the rotary encoder to execute the selection. The display shows the DVD player mode screen. Insert a disc into the DVD/video CD/CD player, the player starts playing.

NOTE

Press the [6] (F.GUIDE) button during DVD/video CD/CD play to turn on or off the Function Guide display.

In the ON position:

The Function Guide display will always be shown.

In the OFF position:

The Function Guide display will disappear after approx. 5 seconds if no button is pressed.

If you want to display the Function Guide screen again, press any one of the Function buttons [1] through [FUNC].

Still/Pause

- 1 Press the [2] (▶/||) button during DVD/video CD/CD play to freeze frame or pause. To resume normal play, press the [2] (▶/||) button for a second time.

Chapter (DVD)/Track (Video CD) Sensor

- 1 Lightly press the [1] (◀◀) or [3] (▶▶) button during DVD/video CD/CD play to return to the beginning of the chapter/track being currently played or advance to the beginning of the next chapter/track respectively.

NOTE

The word "chapter or track" means a division of the recorded picture/sound on a DVD/video CD/CD respectively.

Fast Forward/Backward

- 1 Press and hold the **[1]** (◀◀) or **[3]** (▶▶) button during play to fast backward or forward respectively. Release the button when you reach the desired portion you wish to play. Playback starts from that portion.

Repeat Play

- 1 Press the **[4]** (REPEAT) button during play to repeatedly play the chapter/track or title/disc being currently played.
Each press changes the repeat play as follows:
DVD:
Chapter (repeat play) → **Title (repeat play)** → **Repeat Off (normal play)**
Video CD/CD:
Track (repeat play) ↔ **Disc (repeat play)**

NOTE

The track/disc repeat modes cannot be used on video CDs with playback control (PBC). Press "MENU" to turn the PBC function off. For more details, see the operating instructions of your DVD player or DVD Changer.

Playing tracks in random order (M.I.X.)(Video CD/CD)

You can play all the tracks in random order. You can use the M.I.X. function only on the connected DVD player equipped with the M.I.X. function.

- 1 Press the **[5]** (M.I.X.) button while playing the Video CD or CD. All the tracks play in random order.
To cancel M.I.X. play and return to the original play order, Press the **[5]** (M.I.X.) button again.

NOTES

- You cannot use the repeat play mode during M.I.X. play.
- The M.I.X. play mode cannot be used on video CDs with the playback control (PBC). Press "MENU" to turn the PBC function off. For more details, see the operating instructions of your DVD player, DVD changer.

Displaying List of Disc Titles


If titles have been memorized for Video CDs/CDs, the list of the Video CDs/CD titles can be displayed and Video CDs/CDs can be selected by their titles. (For memorizing titles, see page 41.)

- 1 Press the **LIST** button in the DVD/DVD Changer mode.
The list of disc titles will be displayed and memorized titles will be displayed also.
When DVD disc is inserted, "DVD VIDEO" will be displayed (Depending on the DVD product, "NO TITLE CD" may be displayed as well).
- 2 Rotate the rotary encoder and select (highlight) your desired disc title to play.
- 3 Press the rotary encoder to execute the selection.
The selected title plays, the title list screen closes, and the DVD mode main screen or DVD Changer mode main screen appears.

NOTES

- If the disc is not titled, the display shows "NO TITLE CD." If no disc is loaded, the display shows "NO DISC."
- When the DVA-5205P is connected:
To display the list of disc titles, switch to the DVD main screen mode and press the LIST button while playing the video CD or CD.
- Pressing the LIST or FUNC (RETURN) button while the list of the disc titles is being displayed, changes the display back to the DVD/DVD Changer mode screen.
- IVX-C806:
Pressing the **[2]** button displays the title list or the track title list only when a CD with text is loaded in the built-in CD player.
- IVX-M706:
Pressing the **[1]** button displays the title list or the MD track title list screen.
- CVA-1006R:
When a CD/MD player or changer is connected, pressing the **[1]** button displays the title list.

DVD/Video CD/CD Player/DVD Changer Operation (Optional)

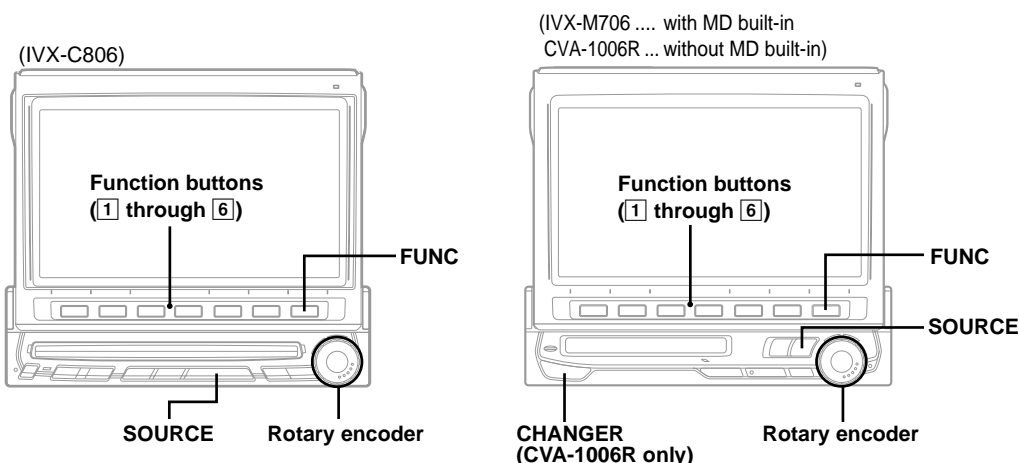

Controlling DVD Changer

If an optional Alpine DVD Changer is connected to the IVX-C806/IVX-M706/CVA-1006R, the DVD Changer can be controlled from the IVX-C806/IVX-M706/CVA-1006R.

* You can directly select the DVD Changer mode by pressing the **CHANGER** (CVA-1006R) button.


- 1** Press the **SOURCE** button to display the main menu.
- 2** Rotate the rotary encoder to select "DVD CHG," then press the rotary encoder.
The display changes to the DVD Changer mode screen.
- 3** When a 6-Disc DVD Changer is connected:
Press the **FUNC** (PAGE 1/2) button. The Function Guide display changes.
Press the Function buttons to select your desired disc loaded. The **Function buttons** [1] (DISC1) through [6] (DISC6) select the discs from the first disc to 6th disc. For example, press the [3] (DISC 3) button to select the third disc.

NOTES


- To select your desired track number on the selected disc, lightly press the [1] (◀◀) or [3] (▶▶) repeatedly until your desired track number is displayed.
- After selecting the desired, you can operate in the same way as for the DVD/Video CD/CD player. For details please see the DVD/Video CD/CD player operation section.
- * If both the CD Changer and DVD Changer are connected, each pressing of the CHG (CHANGER) button changes between the CD Changer mode and the DVD Changer mode.

Navigation System Operation (Optional)

(IVX-C806)

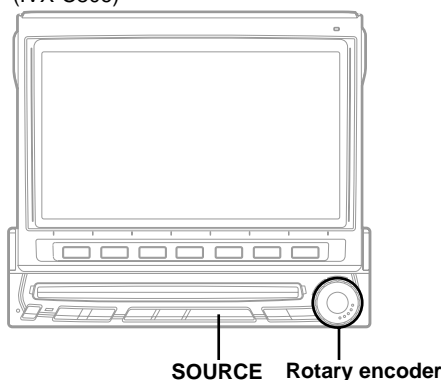

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

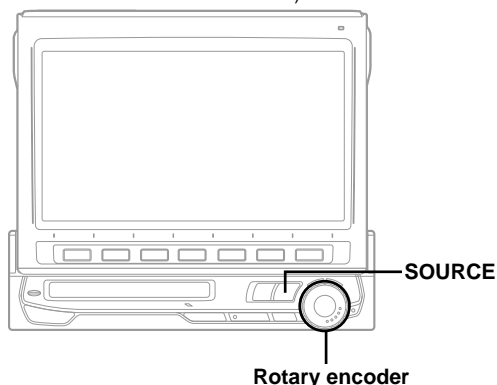

Controlling Navigation System

If an optional Alpine Navigation System is connected to the IVX-C806/IVX-M706/CVA-1006R, some of its functions can be controlled from the IVX-C806/IVX-M706/CVA-1006R. The functions and display indicators available will vary depending upon the Navigation System connected. For details, consult your Alpine dealer.

- 1** Press the **SOURCE** button. The main menu screen appears on the display.
- 2** Rotate the rotary encoder and select "NAVI," then press the rotary encoder to execute the selection.


The Function Guide display changes to show the same button names as those for the remote control supplied with your navigation system.

NOTES


- When the **V. SEL** button is pressed while the Navigation selection mode is being selected in the **VISUAL** setting (refer to page 45), the navigation mode will be directly activated.
- If the Navigation mode menu is not displayed on the main menu screen, select "AUX IN" in the Setup mode screen and set the Navigation mode to the **ON** position.
- If you use the buttons displayed, you can control the navigation system from IVX-C806/IVX-M706/CVA-1006R in the similar way to the remote control operation.
For operation, refer to the Owner's Manual for your navigation system.
- Depending on the navigation system connected to this unit, some functions and displays may vary.

Auxiliary Device Operation (Optional)

(IVX-C806)

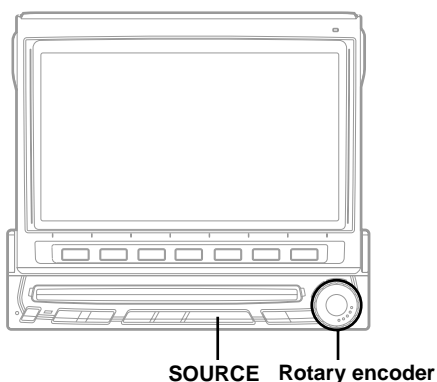

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

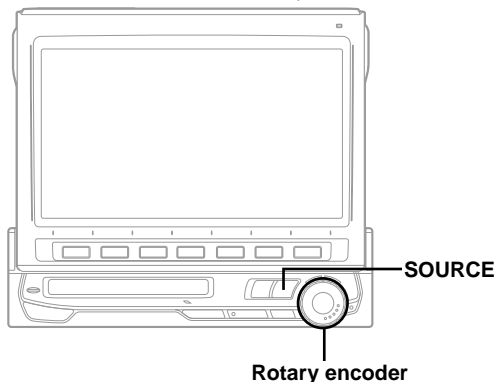

Operating Auxiliary Devices

To operate your devices connected to the AUX terminals on the rear panel of IVX-C806/IVX-M706/CVA-1006R, follow the procedure described below.

WARNING

It is dangerous (and illegal in many states) for the driver to watch the TV/Video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.

Install the IVX-C806/IVX-M706/CVA-1006R correctly so that the driver cannot watch TV/Video unless the vehicle is stopped and the emergency brake is applied.

If the IVX-C806/IVX-M706/CVA-1006R is not installed correctly, the driver will be able to watch the TV/Video while driving the vehicle and may be distracted from looking ahead causing an accident. The driver or other people could be severely injured.


- 1** Press the **SOURCE** button.
The main menu screen appears on the display.
- 2** Rotate the rotary encoder and select "AUX", then press the rotary encoder to execute the selection.

NOTE


If the AUX mode is not displayed on the main menu, select "AUX IN" in the Setup mode screen. Either AUX1 or AUX2 should be turned ON.

Audio Processor Operation (Optional)

(IVX-C806)

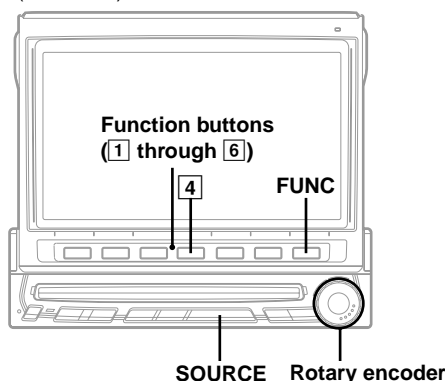

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

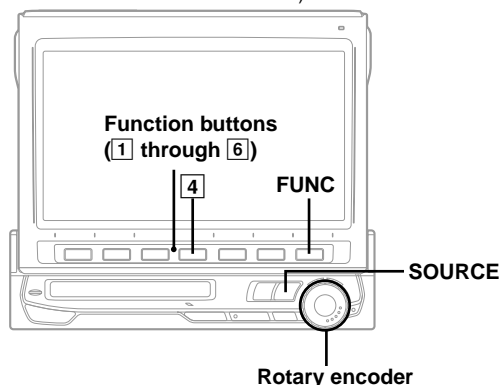

Selecting Factory (Maker's) Equalization Presets

If an optional Alpine Equalizer is connected to the IVX-C806/IVX-M706/CVA-1006R, the Equalizer can be controlled from the IVX-C806/IVX-M706/CVA-1006R.

Six equalization curves are preset on the Equalizer at the factory.

NOTE

When the **FUNC** (**RETURN**) button is pressed, the display returns to the previous screen.


Tip

In the equalizer mode, for example, you can horizontally scroll each of the mode screens by rotating the rotary encoder to the left or right. You can also adjust the volume level by pressing and rotating the rotary encoder (**DHE**, **Surround**, **BBE**, **listening position**, **time collection mode main screen** only).


- 1** Press the **SOURCE** button.
The main menu screen appears on the display.
- 2** Press the **4** (**A.PROC**) button to display the list of the Audio Processors (**A.PROC**).
- 3** Rotate the rotary encoder and select "Equalizer."
Then press the rotary encoder to execute the selection.
The display changes to the Equalizer mode screen.
- 4** Select a desired Equalizer characteristic curve and press the corresponding **Function button** (**1** (**FLAT**) through **6** (**NEWS**)).
You can select your desired equalizer characteristic curve from 6 preset characteristic curves; **FLAT**, **MALE**, **FEMALE**, **POPS**, **ROCK** and **NEWS**.
- 5** When you have selected your desired characteristic curve, press the **FUNC** (**RETURN**).
The display returns to the Audio Processor List screen.

Audio Processor Operation (Optional)

(IVX-C806)

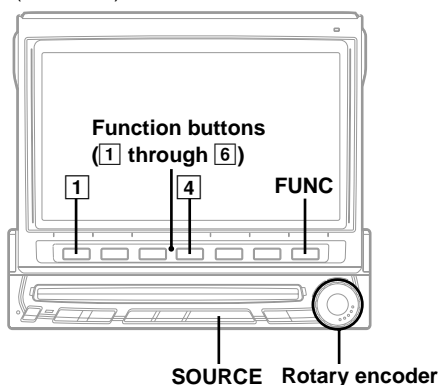

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

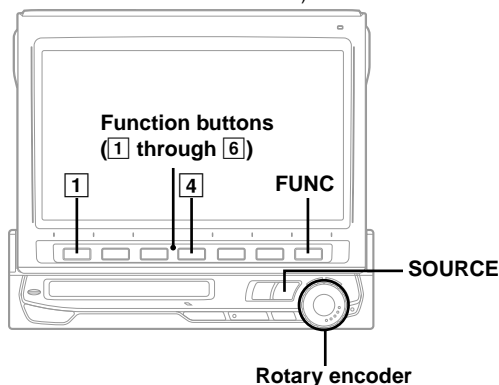

Creating Personal Equalizer Characteristic Curves

You can create your own equalizer characteristic curves. The following is the procedure.

NOTE

The Parking Brake must be engaged to access the Equalizer Adjustment mode screen. Attempting to access this screen while driving, the warning – CAN'T OPERATE WHILE DRIVING will be appeared in the display.

- 1** Display the equalizer mode screen by pressing one of the **Function buttons** [1] (FLAT) through [6] (NEWS) to select the desired characteristic curve you wish to change.
- 2** Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The display changes to show the equalizer adjustment screen .
- 3** Rotate the rotary encoder clockwise or counterclockwise to select the frequency that you wish to adjust. The colour of the frequency changes when it is selected.
- 4** Press the rotary encoder to execute the selection.
- 5** Make level adjustments by rotating the rotary encoder. Press and release the rotary encoder at the desired level.

Repeat the above steps to adjust other frequencies.
- 6** When the adjustments have been completed, press the **FUNC** (RETURN) button.
The display changes to the Equalizer mode screen.

Selecting Factory Surround Mode Presets

Depending upon the music source you listen to, you can choose your desired surround mode from 6 factory-preset surround modes.

- 1** Press the **SOURCE** button.
The main menu screen appears.
- 2** Press the [4] (A.PROC) button.
The Audio Processor list will be displayed.
- 3** Turn the rotary encoder and select "Surround" then press the rotary encoder.
The Surround mode screen appears.
- 4** Press the **Function button** [1] through [6] that has your desired surround mode.

NOTE

You can choose from 6 factory preset surround modes (NORMAL, STADIUM, LIVE, CHURCH, DANCE, and HALL).

- 5** Press the **FUNC** (RETURN) when your selection has been made.
The display returns to the Audio Processor List screen.

Tip

When the FUNC (RETURN) button is pressed, the display returns to the previous screen.

Adjusting Surround Levels and Surround Delay Time

If your equalizer connected is equipped with the surround level/time adjustment feature, you can adjust the surround sound levels and surround delay time to suit to your preference.

- 1 Display the surround mode screen and press one of the **Function buttons** [2] (STADIUM) through [6] (HALL) (except "NORMAL") that has the surround mode you wish to adjust.
- 2 Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The display changes to the surround adjustment screen.
- 3 Press the rotary encoder to select the surround delay time or surround level that you wish to adjust.
Each press toggles between the surround delay time and surround level modes.
- 4 Turn the rotary encoder clockwise or counterclockwise to adjust the surround sound level or delay time to your preference.
After adjustment press the rotary encoder.
- 5 When your adjustments are complete, press the **FUNC** (RETURN) button.
The display returns to the Surround mode screen.

Selecting DHE (Digital Harmonic Enhancer) Mode

The DHE mode enhances the sound of musical instruments or vocals, while masking road noises of a moving vehicle. The result is music with more clarity.


- 1 Press the **SOURCE** button.
The main menu screen appears on the display.
- 2 Press the [4] (A.PROC) button to display the Audio Processor List screen.
- 3 Rotate the rotary encoder and select "DHE," then press the rotary encoder to execute the selection.
The DHE mode screen appears.
- 4 Press one of the **Function buttons** [2] (MODE1) through [6] (MODE5) that has your desired DHE mode. There are 5 modes as follows.
When the [1] (OFF) button is pressed, the DHE mode will be deactivated.
 - Beat MAX (MODE1)**
Enhances the rhythmic bass sound to make very harmonic bass sound.
 - Lyric MAX (MODE2)**
Enhances voice of female singers to make it brighter.
 - Beat MIX (MODE3)**
Balances the bass sound to make it brighter.
 - Lyric MIX (MODE4)**
Reproduces voice of female singers clearer.
 - Phase MIX (MODE5)**
Reproduces any kind of music sources more balanced and crisp.
- 5 When you have selected your desired DHE mode, press the **FUNC** (RETURN) button.
The display returns to the Audio Processor List screen.

Tip


When the **FUNC** (RETURN) button is pressed, the display returns to the previous screen.

Audio Processor Operation (Optional)

(IVX-C806)

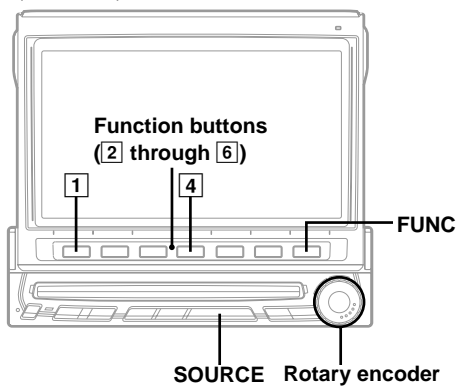

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

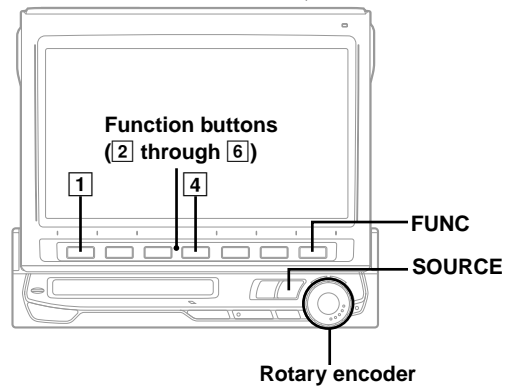

Setting DHE Power or Fine Mode

The DHE Power and Fine modes enhance the DHE effects. Power makes coarse adjustments to the overall balance whereas Fine will make more subtle changes. Listen to how each mode affects the music and select the one most pleasing to your taste.

- 1** Activate the DHE mode, then press one of the **Function buttons** [2] (MODE1) through [6] (MODE5) that has the desired DHE mode to be adjusted.
- 2** Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The DHE adjustment mode is activated.
- 3** Press the rotary encoder to select the desired mode either DHE Power or DHE Fine mode, then rotate the rotary encoder to select the ON or OFF mode. Each press toggles between the Power/Fine on and off modes.
When it is set to the ON mode, the DHE effects will be enhanced.

Effect of the Power On mode:

- More powerful bass sound and crisp, clear sound will be produced.

Effect of the Fine On mode:

- Vocal/chorus music will be refined and becomes clearer.

Selecting BBE Mode

The BBE (Barcus Berry Electronics) Surround Processor is designed to return the natural balance of harmonic time alignment, which disappears when the sound signal is amplified and reproduced by loudspeakers. The result of this processing is crisp, clean sound with tighter transients and sharper imaging. If you make the BBE adjustments after adjusting the surround settings, the audible processing result will be enhanced remarkably.

- 1** Press the **SOURCE** button.
The main menu screen appears in the display.
- 2** Press the [4] (A.PROC) button. The Audio Processor List screen is displayed.
- 3** Rotate the rotary encoder and select "BBE" from the list displayed. Press the rotary encoder to execute the selection.
The display changes to the BBE mode screen.
- 4** Select a desired BBE mode and press the corresponding **Function button**, [2] (MODE1) through [4] (MODE3). The effect is proportionally reduced for the BBE-2 and BBE-3 has the least effect.
To deactivate the BBE mode, press the [1] (OFF) button.
- 5** When the setting has been completed, press the **FUNC** (RETURN) button.

Tip

When the **FUNC** (RETURN) button is pressed, the display returns to the previous screen.

Customizing BBE Mode

This function is operative only when an audio processor equipped with the BBE level (Low and High) adjustment feature is connected.

- 1 Activate the BBE mode (see the previous page), then press the **Function button** [2] (MODE1) through [4] (MODE3) that has the BBE mode you wish to adjust.
- 2 Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The BBE adjustment mode is activated.
- 3 Press the rotary encoder to select "HI LEVEL" or "LOW LEVEL." Each press toggles between "HI LEVEL" and "LOW LEVEL."
- 4 Rotate the rotary encoder and adjust the level to your desired level.
- 5 When adjustment is complete, press the **FUNC** (RETURN) button. The display returns to the BBE mode screen.

Selecting Listening Position

You can select the listening position for optimum sound field depending on the number of passengers in the vehicle.

- 1 Press the **SOURCE** button.
The main menu screen appears on the display.
- 2 Press the [4] (A.PROC) button. The Audio Processor List screen appears.
- 3 Rotate the rotary encoder and select L.P.S. (Listening Position Setting) in the menu. Press the rotary encoder to execute the selection. The display changes to the L.P.S. (Listening Position Selection) mode screen.
- 4 Press the **Function button** [2] (ALL) through [5] (FRONT/RIGHT) that has your desired listening position.

NOTES

- The black squares show the listening positions.
- When the [1] (OFF) button is pressed, the L.P.S. mode is deactivated.

- 5 When selection has been completed, press the **FUNC** (RETURN) button.
The display returns to the Audio Processor List screen.

Tip


When the **FUNC** (RETURN) button is pressed, the display returns to the previous screen.

Adjusting Listening Position


- 1 Activate the L.P.S. mode and select the listening position you wish to adjust by referring to "Selecting Listening Position" section.
- 2 Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The display changes to the L.P.S. Adjustment mode.
- 3 Press the rotary encoder and select "F/R" (Front/Rear) or "L/R" (Left/Right) you wish to adjust.
- 4 Rotate the rotary encoder to adjust to the desired listening position.
When the rotary encoder is rotated in the F/R mode, the cursor moves forward or backward, and when it is rotated in the L/R mode, the cursor moves to the left or right.
- 5 When adjustment has been completed, press the **FUNC** (RETURN) button.
The display returns to the L.P.S. mode screen.

Audio Processor Operation (Optional)

(IVX-C806)

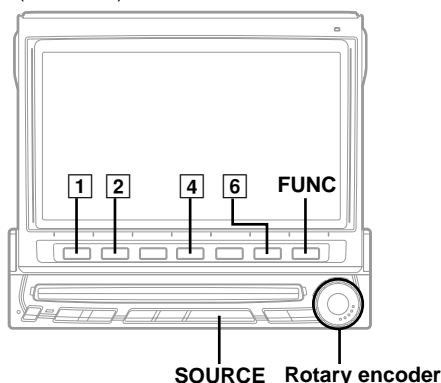

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

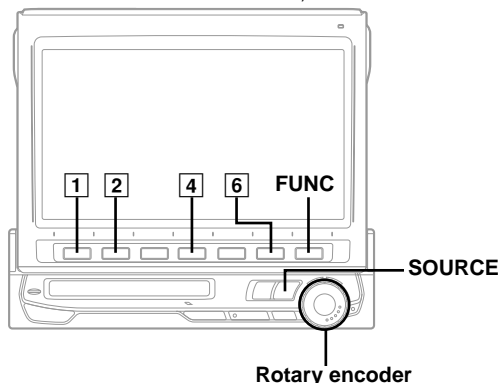

Adjustment of Time Correction Value

- 1 Press the **SOURCE** button.
The main menu appears on the display.
- 2 Press the **[4]** (A.PROC) button.
The Audio Processor List appears.
- 3 Rotate the rotary encoder and select the "Time-Corr." (Time-Correction), then press the rotary encoder.
The display changes to the Time-Correction mode screen.
- 4 Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The display changes to the Time-Correction Adjustment mode screen.
- 5 Press the rotary encoder repeatedly to select the position (seat) you wish to adjust.
Each press changes the seat positions as follows:

→ Fr/Left → Fr/Righ → Rear/Left → Rear/Right →
- 6 Rotate the rotary encoder clockwise or counterclockwise to increase or decrease the Time-Correction value respectively to your desired value.
- 7 When adjustment has been completed, press the **FUNC** (RETURN) button. The display returns to the Time-Correction mode screen.

Tip

When the **FUNC** (RETURN) button is pressed, the display returns to the previous screen.

Adjusting Cross-Over (X-Over) Point of 2-Way Divider

If an optional Alpine Channel Divider PRA-H400 is connected, you can control the Divider from the IVX-C806/IVX-M706/CVA-1006R. Use this procedure when one or two 2-way-system or 3-way system channel dividers are connected.

- 1 Press the **SOURCE** button.
The main menu screen appears on the display.
- 2 Press the **[4]** (A.PROC) button.
The display shows the Audio Processor list screen.
- 3 Rotate the rotary encoder and select the "Divider" (when one divider is connected) or "Divider-F and Divider-R" (when two dividers are connected), then press the rotary encoder to execute the selection.
The display changes to the Divider mode screen.
- 4 Press and hold the **FUNC** (RETURN) button for at least 2 seconds.
The mode changes to the Divider Adjustment mode.
- 5 Press the **[1]** (X-OVER) button. The mode changes to the Cross-Over Adjustment mode.

- 6** Press the rotary encoder and select the channel that you wish to adjust.
Each press changes the channel as follows.

When only one 2-way divider is connected:

→ Low → F-High → R-High →

When two 2-way dividers are connected:

→ Low → High →

↑ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.
↓

→ Low → High →

When only one 3-way divider is connected:

→ Low → Mid-L → Mid-H → High →

When two 3-way dividers are connected:

→ Low → Mid-L → Mid-H → High →

↑ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment, and the display also changes.
↓

→ Low → Mid-L → Mid-H → High →

- 7** Rotate the rotary encoder clockwise or counterclockwise to adjust the Cross-Over point upward or downward to your desired point.

- 8** When the adjustment has been completed, press the **FUNC** (RETURN) button. The display returns to the Divider mode screen.

Adjusting Levels

- 1** Press and hold the **FUNC** (RETURN) button for at least 2 seconds in the Divider mode. The mode changes to the Divider Adjustment mode.
- 2** Press the [2] (LEVEL) button. The mode changes to the Level Adjustment mode.
- 3** Press the rotary encoder and select the channel you wish to adjust. Each press changes the channels as follows:

When only one 2-way system divider is connected:

→ L-Low → R-Low → F-High/L
R-High/R ← R-High/L ← F-High/R ←

When two 2-way system dividers are connected:

→ L-Low → R-Low → L-High → R-High →

↑ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment, and Rear adjustment modes, and the display also changes.
↓

→ L-Low → R-Low → L-High → R-High →

When only one 3-way divider is connected:

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High →

When two 3-way dividers are connected:

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High →


↑ Each time the [6] (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.
↓

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High →


- 4** Rotate the rotary encoder clockwise or counterclockwise to adjust to your desired level upward or downward respectively.
- 5** When adjustments have been completed, press the **FUNC** (RETURN) button. The display returns to the Divider mode.

Audio Processor Operation (Optional)

(IVX-C806)

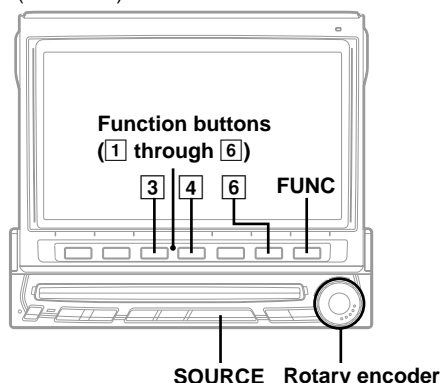

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

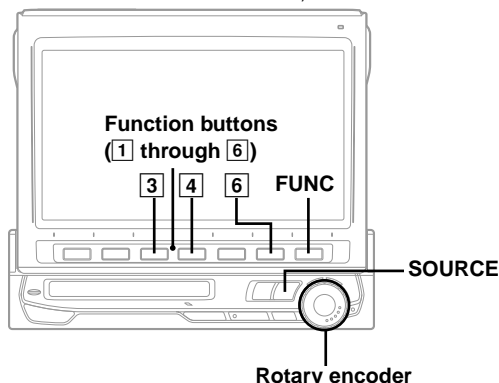

Adjusting Time-Correction for 2-Way Speaker System

Use this procedure to adjust the sound time difference between the speakers.

- 1** Press and hold the **FUNC** (RETURN) button for at least 2 seconds in the Divider mode.
The mode changes to the Divider Adjustment mode.
- 2** Press the **[3]** (T-CORR.) button.
The mode changes to the Time Correction Adjustment mode.
- 3** Press the rotary encoder and select the channel you wish to adjust.
Each press changes the channels as follows:

When only one 2-way divider is connected:

→ L-Low → R-Low → F-High/L
R-High/R ← R-High/L ← F-High/R ←

When two 2-way dividers are connected:

→ L-Low → R-Low → L-High → R-High

Each time the **[6]** (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

→ L-Low → R-Low → L-High → R-High

When two 3-way dividers are connected:

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High

Each time the **[6]** (F/R) button is pressed, the mode switches between the Front adjustment and Rear adjustment modes, and the display also changes.

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High

- 4** Rotate the rotary encoder clockwise or counterclockwise to adjust the time correction value upward or downward respectively.
- 5** When adjustments have been completed, press the **FUNC** (RETURN) button.
The display returns to the Divider mode screen.

When only one 3-way divider is connected:

→ L-Low → R-Low → L-Mid → R-Mid → L-High → R-High

Memorizing Divider Settings

You can store your settings of the divider(s) in memory when you have adjusted them.

- 1 After adjusting the divider(s), display the Divider mode screen.
Press and hold any one of the **Function buttons** [1] (P.SET1) through [4] (P.SET4) for at least 2 seconds.
The indicators for the 4 buttons blink for 5 seconds.
- 2 While the indicators are still blinking, press the **Function button** into which you want to memorize (preset) the divider settings.
Repeat the above steps to memorize 3 other divider settings.

Recalling Memorized Divider Settings Using Function Buttons

- 1 Display the Divider mode screen.
Press the **Function button** [1] (P.SET1) through [4] (P.SET4) that has your desired divider settings.
The divider setting stored at the Function button will be recalled.

Tip

You can also recall your desired divider settings memorized by pressing the [4] (◀P.DN) or [5] (▶P.UP) button in the Divider mode.

Recalling Divider Settings Memorized Using Optional Divider

If an optional Alpine divider (such as PXA-H600/ PXA-H510) is connected, you can recall the settings memorized using the optional divider.

- 1 Press the **SOURCE** button.
The main menu is displayed on the display.
- 2 Press the [4] (A.PROC) button.
The Audio Processor List screen is displayed.
- 3 Rotate the rotary encoder and select "Adaptive EQ." The Function Guide screen is displayed.

- 4 Press the **Function button** [1] (P.SET1) through [6] (P.SET6) that has your desired setting memorized using the optional divider.
- 5 Press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Memorizing Characteristic Curves

Equalization characteristic curves created by yourself or factory preset can be stored in memory. (See page 29.)


- 1 Select one of the factory preset characteristic curves or make your own (personal) characteristic curve. Then, display the Audio Processor List and select "Private Memo."
- 2 Press and hold any one of the **Function buttons** [1] (P.SET1) through [6] (P.SET6) for at least 2 seconds.
The Function Guide indicators P.SET1 through P.SET6 in the preset mode display blink indicating that you can memorize the characteristic curve.
- 3 While the Function Guide indicators are blinking, press the **Function button** [1] (P.SET1) through [6] (P.SET6) into which you wish to memorize the characteristic curve.
Now, the characteristic curve has been memorized.
Repeat this procedure to memorize other characteristic curves.

NOTE


This unit can memorize curves together with the settings of the equalizer, DHE, BBE and Surround Time Correction.

Audio Processor Operation (Optional)

(IVX-C806)

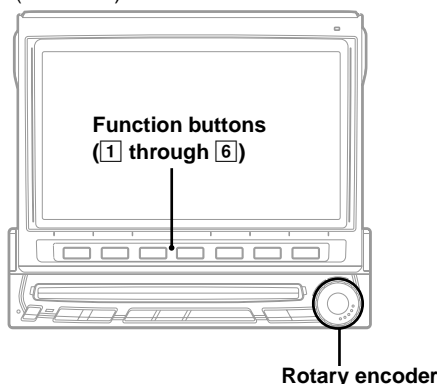

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

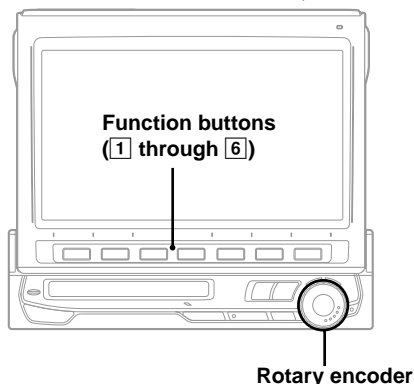

Recalling Memorized Characteristic Curves Using Function Buttons


- 1 Activate the desired mode, DHE, BBE, surround, time correction or equalizer, then press the **Function button** **1** (P.SET1) through **6** (P.SET6) that has your desired characteristic curve. The selected characteristic curve is recalled.

Selecting Characteristic Curves from Displayed Audio Processor List

You can select your desired characteristic curves directly from the Audio Processor (A.PROC) List without switching to individual mode screens.

- 1 Display the Audio Processor List screen. Rotate the rotary encoder and select the desired mode by moving the cursor. The Function Guide for the selected mode is displayed.
- 2 Press the **Function buttons** **1** through **6** that has your desired characteristic curve. The list shows the details of the curve selected.

Other Useful Features

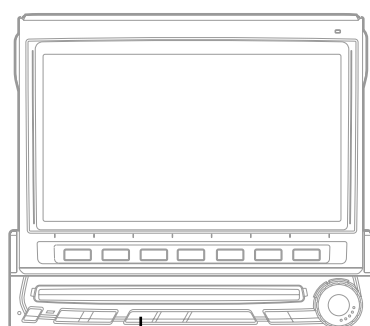

SPE.ANA.

(IVX-C806)

Displaying Spectrum Analyzer (IVX-C806 only)

Depending on the external audio processor connected to the unit, this function may not work properly.

- 1 While the main screen for a music source is displayed, press the **SPE.ANA.** button to turn on the spectrum analyzer mode.
- 2 Each time you press the **SPE.ANA.** button, the spectrum analyzer modes change. There are three modes, select your desired mode to match the music being played.

Mode 1: This mode can be used for any genre of music.



Mode 2: This mode is suitable to vocal song music.



Mode 3: This mode emphasizes the rhythmical bass sound and gives an image of vivid low frequencies.




- SCAN Display
It displays mode1 to mode3 repeatedly.


- 3 To deactivate the spectrum analyzer mode, press the **SPE.ANA.** button for at least 2 seconds.

Other Useful Features

(IVX-C806)

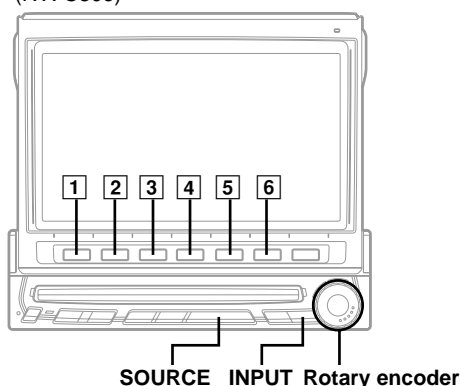

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

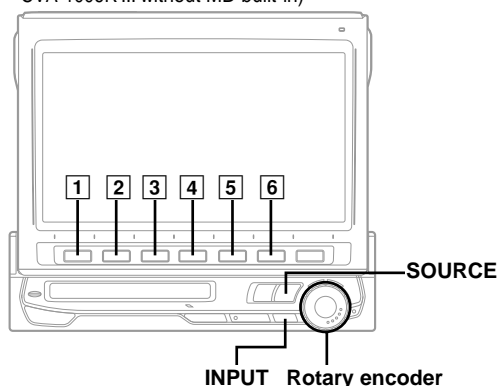

Displaying Spectrum Analyzer (IVX-M706/CVA-1006R only)

Depending on the external audio processor connected to the unit, this function may not work properly.

- 1** Press the **SOURCE** button.
The main menu appears in the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen is displayed.
- 3** Rotate the rotary encoder and select "SPE. ANA."
The Function Guide menu appears in the display.
- 4** Press any one of the buttons **[3]** (MODE 1) through **[5]** (MODE 3), your desired mode to match the music being played.

Mode 1: This mode can be used for any genre of music.



Mode 2: This mode is suitable to vocal song music.



Mode 3: This mode emphasizes the rhythmical bass sound and gives an image of vivid low frequencies.



- **SCAN Display**
It displays mode 1 to mode 3 repeatedly.
- 5** To deactivate the spectrum analyzer mode, press the **[1]** (OFF) button.

Turning Defeat Mode On and Off

When the defeat mode is on, the sound signals bypass the BBE and surround circuits and directly go to the line output. The equalizer curve, therefore, becomes flat.

- 1** Press the **SOURCE** button. The main menu screen appears on the display.
- 2** Press the **[4]** (A.PROC) button. The display shows the Audio Processor List screen.
- 3** Rotate the rotary encoder and select "Defeat."
The Function Guide is displayed.
- 4** Press the **[2]** (ON) button to turn on the defeat mode. The sound signals bypass the BBE and surround circuits.
To turn off the defeat mode, press the **[1]** (OFF) button.

Titling CDs

You can title up to 120 CDs (max.).

Immediately after inputting titles or changing the settings of Initialize Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

NOTE

The Parking Brake must be engaged to access the TITLE INPUT mode screen. Attempting to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.

- 1** Activate the CD mode.
Play a CD that you want to title (name).
- 2** Press and hold the **INPUT** button for at least 2 seconds.
The Title Inputting screen appears in the display.
- 3** Characters are displayed at the bottom menu.
Rotate the rotary encoder and select the desired character for the first position.
To change between upper case, lower case, numeral and symbol, press the **[3]** (A/1) button.
Each press changes the bottom menu.
- 4** When the character for the first position has been selected, press the rotary encoder. The first character has been memorized at the first position. See "Notes" on page.
- 5** Repeat steps 3 and 4 to enter the rest of characters. You can input up to 12 characters for titling one CD.
- 6** When titling has been completed, press the **[6]** (WRITE) button to store the title in memory.
The display changes to the CD mode.


The input titles will be displayed when a CD titled is selected.

NOTES


- If the memory capacity for CD titles is full and if you attempt to title a new CD, the oldest title will be erased to make room for the new one. To delete a title, select the title you want to delete, then select "SPC" (space) and press the **[6]** (WRITE) button.
- When the **[1]** (◀ BACK) or **[2]** (NEXT ▶) button is pressed, the cursor moves to the left or right on the input titles.
- If an incorrect character has been entered, select "SPC" (space) and input a new character, or press the **[4]** (DELETE) button to delete the previous character. Press the **[5]** (CLEAR) button while inputting the titles to erase all the characters you have input.
- Pressing the **FUNC** (RETURN) button in the Title Input mode changes the display back to the previous display.
- You can title the VIDEO CD/CD while it is in DVD or DVD changer mode. The title you entered is displayed in the Disc Title List display (P. 25)
(Do not operate while driving. Stop the car, then use this operation.)
- When the DVA-5205P is connected:
To display the title input screen, switch to the DVD main screen mode and press and hold the **INPUT** button for at least 2 seconds while playing the video CD or CD.
To display the list of disc titles, switch to the DVD main screen mode and press the **LIST** button while playing the video CD or CD.

Other Useful Features

(IVX-C806)

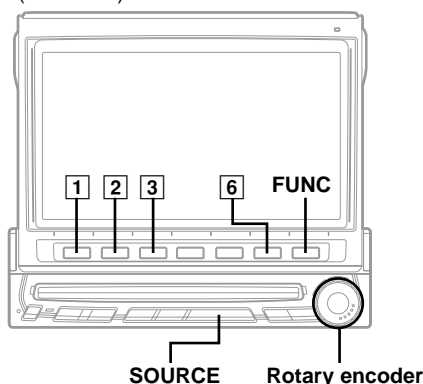

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

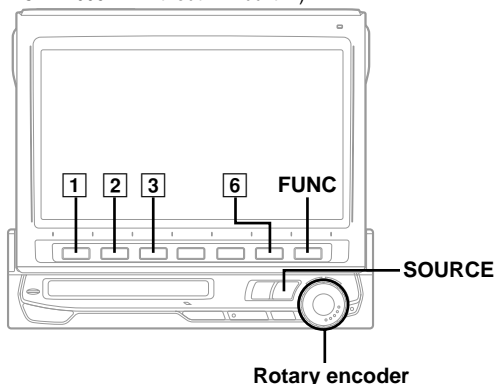

Adjusting Subwoofer Level (when subwoofer is used with other speakers)

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen is displayed.
- 3** Rotate the rotary encoder and select "Sub wf."
The Function Guide appears on the display.
- 4** Press the **[2]** (ON) button to turn on the subwoofer.
To turn off the subwoofer, press the **[1]** (OFF) button.
- 5** Press the rotary encoder repeatedly to select "SUB W." Each press changes the modes as follows:

→ SUB.W. → BAS. → TRE. → BAL. → FAD. → VOL. →

- 6** Rotate the rotary encoder and adjust the subwoofer output level.
- 7** When your adjustment has been completed, press the **FUNC** (RETURN) button.
The display returns to the main menu.

NOTES

- For further information, please contact your Alpine dealer.
- When you connect a subwoofer, you need an amplifier with built-in low-pass filter.*
* The low-pass filter passes only the frequencies below the selected cut-off frequency. Any high frequency content of the audio signal above the cut-off will be removed.
- With the Setup screen displayed, pressing and rotating the rotary encoder can adjust the volume level.

Switching Phase

Use the phase-switching function after connecting your audio-processor, amplifier and subwoofer to the IVX-C806/IVX-M706/CVA-1006R.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen is displayed.
- 3** Rotate the rotary encoder and select "Sub Wf."
The Function Guide is displayed.
- 4** Press the **[2]** (0°) or **[3]** (180°) button to switch the phase of the subwoofer output.

To turn off this function, press the **[1]** (OFF) button.
- 5** When setting has been completed, press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Setting the External Device Interrupt Mode

If an Alpine Ai-NET Interrupt Box (NVE-K200) is connected to the IVX-C806/IVX-M706/CVA-1006R, an Auxiliary Source will be allowed to interrupt the current audio source. For example, you can listen to the voice guidance of your navigation system when it occurs even while you are playing a CD or MD. The CD/MD player will be automatically muted during voice guidance. For further details, please refer to the manual for NVE-K200.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu screen appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears on the display.
- 3** Rotate the rotary encoder and select "IN-INT MUTE" from the Setup mode screen. The Function Guide appears on the display.
- 4** Press the **[1]** (OFF) button to turn off the mute mode.

In the mute OFF mode:

The volume level can be adjusted in the interrupt mode.

NOTE

When the mute ON mode is selected, sound will not produce.


- 5** When your setting has been completed, press the **FUNC** (RETURN) button.
The display returns to the main menu.

NOTE


The Auxiliary device being connected, must have an Interrupt wire with a positive trigger; for this function to operate automatically. Otherwise, a separate switch needs to be added to switch manually.

Other Useful Features

(IVX-C806)

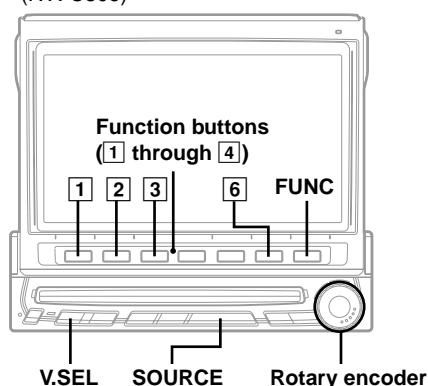

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

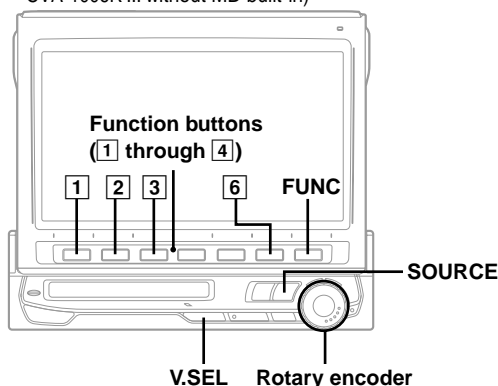

Setting Interrupt Icon Display (IN-INT)

The unit can display the icon of the external device such as a telephone whenever a phone call comes in to tell you there is a phone call.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "IN-INT."
The Function Guide is displayed.
- 4** Press **[1]** (TEL) button.
When the external device (telephone) sends the interrupt signal, the telephone icon appears on the display.
When the **[2]** (INT.) button is pressed, the INT icon appears on the display.

Interrupt Feature (MIX LEVEL)

With an Alpine navigation system connected to the IVX-C806/IVX-M706/CVA-1006R, the voice guidance of the navigation system will be mixed with the radio or CD/MD play. You can adjust the volume level of the voice guidance.

You cannot use this function with an external amplifier.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu screen appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "MIX LEVEL."
The Function Guide is displayed.
- 4** Press the **[2]** (DOWN) or **[3]** (UP) button to adjust the volume level of the navigation system's voice guidance in 7 steps.
To turn off the navigation interrupt mode, press the **[1]** (OFF) button.
- 5** Press the **FUNC** (RETURN) button to return to the main menu screen.

NOTES

- When the voice guidance of the Navigation system starts to interrupt the audio the display is automatically changed to the navigation screen.
- The volume level of the audio will be automatically reduced when the voice guidance of the Navigation system starts.

Setting Bass Frequency

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

NOTE

When an equalizer or digital sound processor is connected, this function is inoperative.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "BASS Cont." to activate the Bass Control mode.
- 4** Press the **Function button [1]** (60 Hz) through **[4]** (100 Hz) that has the frequency you wish to control.
- 5** Press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Setting Visual Mode

For direct access to the different visual screens, preset to the Navigation or V. SEL. You can then display the screen of the preset item by just pressing the V. SEL button on the IVX-C806/IVX-M706/CVA-1006R.


Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.


- 1** Press the **SOURCE** button.
The main menu screen appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "VISUAL."
The Function Guide is displayed.
- 4** Press the **[1]** (NAV.) or **[2]** (V. SEL) to preset the desired item.
 - When "NAVI" is preset: Pressing the **V. SEL** button directly switches to the navigation screen.
 - When "V. SEL" is preset: Each press of the **V. SEL** button switches the modes;
→ **NAV.** → **AUX1** → **AUX2** → **DISPLAY** →

Other Useful Features

(IVX-C806)

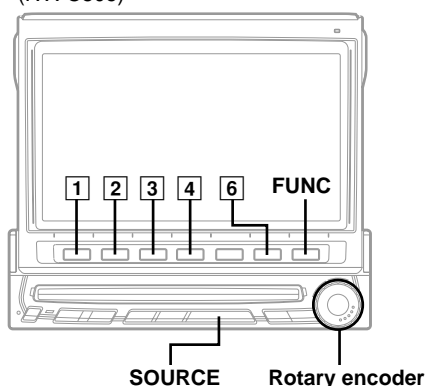

(IVX-M706 with MD built-in
CVA-1006R without MD built-in)

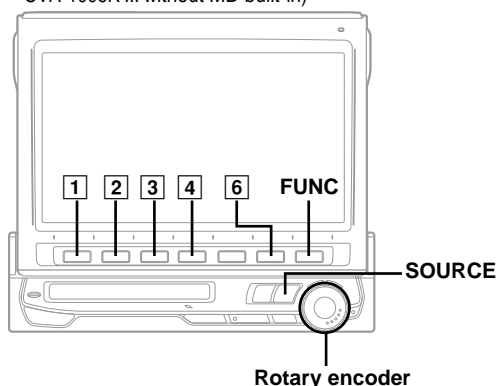

Selecting Rear Monitor

If a rear-seat monitor and a navigation system are connected to the IVX-C806/IVX-M706/CVA-1006R, you can switch the picture/sound of the rear-seat monitor from the IVX-C806/IVX-M706/CVA-1006R.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

NOTES

- If the DVD player or DVD changer is connected to the AUX1 terminal, operate the above four steps when the DVD picture has been produced in steps 1 through 3 in "Playing 2 Sources Simultaneously" on page 53. DVD picture and sound will come from the rear seat monitor.
- To deactivate the mode, press the same button.
- If no particular picture is selected for the rear-seat monitor in the AUX OUT mode, the rear-seat monitor displays the same picture as for the IVX-C806/IVX-M706/CVA-1006R.

- 1 Press the **SOURCE** button.
The main menu appears on the display.
- 2 Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3 Rotate the rotary encoder and select "AUX OUT."
The Function Guide is displayed.
- 4 Press the **[1]** (NAV.) button, the navigation screen will be displayed and the voice guidance will be produced on the rear-seat monitor if the navigation system is connected.
 - When the **[2]** (AUX1) button is pressed, the device connected to Terminal AUX 1 will be played on the rear-seat monitor and the monitor produces picture and sound.
 - When the **[3]** (AUX2) button is pressed, the device connected to Terminal AUX 2 will be played on the rear-seat monitor and the monitor produces picture and sound.

Displaying Time

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1 Press the **SOURCE** button.
The main menu appears on the display.
- 2 Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3 Rotate the rotary encoder and select "CLOCK DISP."
The Function Guide appears.
- 4 Press the **[1]** (OFF) or **[2]** (ON) button to turn off or on the clock display respectively.
- 5 Press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Resetting Clock

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1 Press the **SOURCE** button.
The main menu appears on the display.
- 2 Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3 Rotate the rotary encoder and select "CLOCK ADJ." to activate the clock adjustment mode.
The Function Guide appears.
- 4 Press the **[1]** (✓ DN) or **[2]** (UP ^) button to delay or advance the hours respectively.
- 5 Press the **[3]** (✓ DN) or **[4]** (UP ^) button to delay or advance the minutes respectively.

- 6 Press the **FUNC** (RETURN) button after adjusting the clock.
The display returns to the main menu screen.

NOTE

To quickly set the time to the nearest hour, press the **[5]** (TIME RESET) button. If the displayed time is before the half hour, pressing the **[5]** (TIME RESET) button sets the clock back to the previous hour. If the displayed time is after the half hour, pressing the **[5]** (TIME RESET) button sets the clock forward to the beginning of the next hour.



Setting Daylight Saving Time

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1 Press the **SOURCE** button.
The main menu screen is displayed.
- 2 Press the **[6]** (SETUP) button. The Setup screen is displayed.
- 3 Rotate the rotary encoder and select "Summer Time." The Function Guide is displayed.
- 4 Press the **[2]** (ON) button to place the Summer Time mode ON.
The time advances by one hour.
To return to the ordinary time, press the **[1]** (OFF) button.
- 5 Press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Other Useful Features

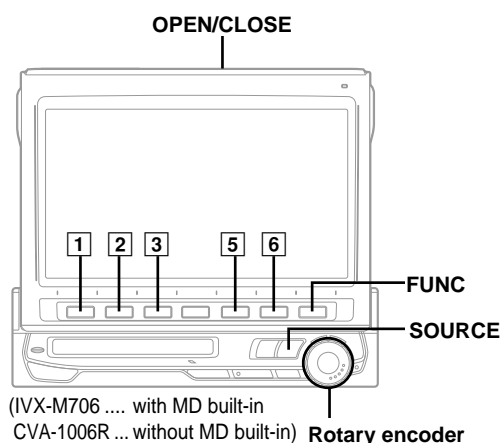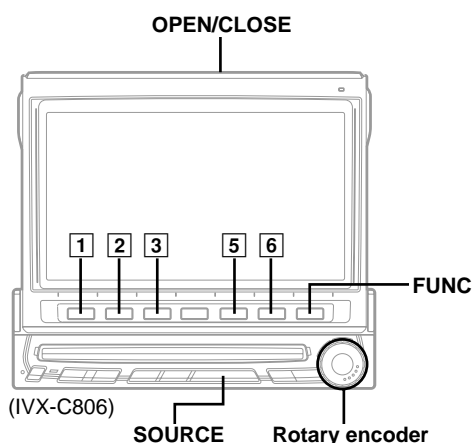

Sound (Beep) Guide Function

This function will give audible feedback with varying tones depending upon the button pressed.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "BEEP."
The Function Guide is displayed.
- 4** Press the **[2]** (ON) button to activate the Sound Guide mode. The display shows "BEEP ON."
Press the **[1]** (OFF) button to deactivate the Sound Guide mode. The sound guide beep will not be produced when a button on the unit is pressed.
- 5** When the setting has been completed, press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Demonstration

In the Demonstration mode, the unit performs scanning of the basic operation of each source.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "DEMO" to activate the Demonstration Selection mode.
The display shows the Function Guide screen.
- 4** Press the **[2]** (ON) button to activate the Demonstration mode. When the Demonstration mode is activated, the unit automatically starts the demonstration (simulation). The demonstration continues until the demonstration mode is deactivated.
To deactivate the demonstration mode, press the **[1]** (OFF) button. The demonstration stops.

Setting Automatic Opening/ Closing of Monitor

When the Automatic Opening/Closing mode is "ON," the monitor automatically opens when the ignition key is turned to the "ACC" or "ON" position. The monitor automatically closes when the ignition key is turned OFF.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[6]** (SETUP) button.
The Setup mode screen appears.
- 3** Rotate the rotary encoder and select "AUTO OPEN."
The display shows the Function Guide.
- 4** Press the **[2]** (ON) button to set the Auto Opening mode ON.
To set the Auto Opening mode OFF, press the **[1]** (OFF) button. If set to the "OFF" position, the monitor should be manually opened or closed by pressing the **OPEN/CLOSE** button.
- 5** Press the **FUNC** (RETURN) button, the display returns to the main menu screen.

Adjusting Brightness of Picture

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

NOTE

The Parking Brake must be engaged to access the display mode screen. Attempting to access this screen while driving will display the warning-CAN'T OPERATE WHILE DRIVING.


- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[5]** (DISPLAY) button.
The Display mode screen appears.
- 3** Rotate the rotary encoder and select "BRIGHT" to activate the Brightness Adjustment mode.
The display shows the Function Guide.
- 4** Press the **[1]** (◀ DARK) to make the picture darker or press the **[3]** (LIGHT ▶) to make the picture brighter. You can adjust the brightness between MIN (-15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively. To quickly set to the centre position, press the **[2]** (±0) button.
- 5** When the adjustment has been completed, press the **FUNC** (RETURN) button. The display returns to the main menu screen.

NOTE


With the Display mode screen displayed, pressing and rotating the rotary encoder can adjust the volume level.

Other Useful Features

(IVX-C806)

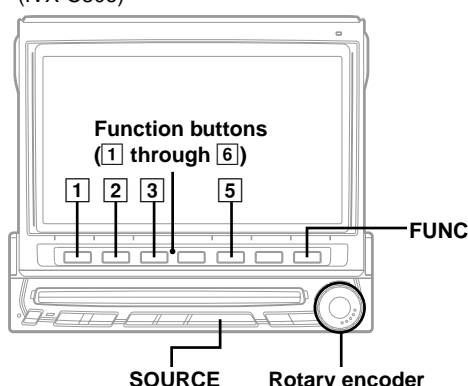

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

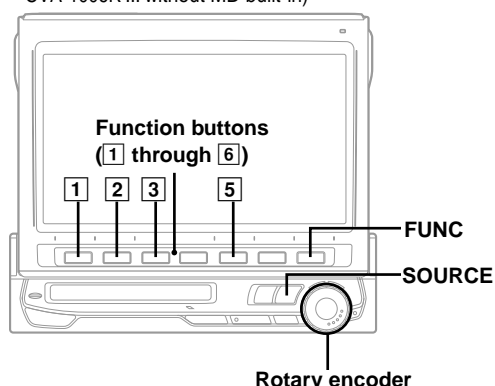

Adjusting Tint of Picture

Tint adjustment can be made only in the navigation, DVD, AUX1 and AUX2 modes. Tint adjustment cannot be made if a Navigation system with the RGB feature is connected.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Rotate the rotary encoder while the DISPLAY mode screen is displayed and select "TINT" to activate the Tint Adjustment mode. The Function Guide is displayed.
- 2** Press the **[1]** (◀ GRN) button to adjust green and press the **[3]** (RED ▶) button to adjust red. To quickly set to the centre position, press the **[2]** (±0) button.
- 3** When the tint adjustment has been completed, press the **FUNC** (RETURN) button. The display returns to the main menu screen.

Adjusting Colour of Picture

Colour adjustment can be made only in the navigation, DVD, AUX1 and AUX2 modes. Colour adjustment cannot be made if a Navigation system with the RGB feature is connected.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Rotate the rotary encoder while the DISPLAY mode screen is displayed and select "COLOR" to activate the colour adjustment mode. The Function Guide is displayed.
- 2** Press the **[1]** (◀ THIN) or **[3]** (THICK ▶) button to make the colour of the picture brighter or darker respectively to get your desired colour. You can adjust the colour between MIN (−15) and MAX (+15). When it reaches the minimum or maximum point, the display shows "MIN" or "MAX" respectively. To quickly set to the centre position, press the **[2]** (±0) button.
- 3** When the adjustment has been completed, press the **FUNC** (RETURN) button. The display returns to the main menu screen.

Illumination Control

Setting the illumination control to AUTO, decreases the illumination brightness of the IVX-C806/IVX-M706/CVA-1006R, whenever the parking lamps of the vehicle are ON.

Use this function if you feel the unit's illumination is too bright at night.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[5]** (DISPLAY) button.
The Display mode screen is displayed.
- 3** Rotate the rotary encoder and select "DIMMER."
The Function Guide is displayed.
- 4**
 - Press the **[3]** (AUTO) button to activate the Auto Dimmer mode. In the Auto Dimmer mode, the background illumination of the monitor is synchronized with the instrument illumination of the vehicle (the dimmer input lead should be connected).
 - Press the **[1]** (OFF) button to deactivate the Auto Dimmer mode to keep the background illumination of the monitor bright.
 - Press the **[2]** (ON) button to keep the background illumination of the monitor dark.
- 5** When the setting has been completed, press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Switching Background Textures/Colours

You have a choice of 12 different background textures/colours preset at the factory. Select them following the procedure below.

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.

- 1** Rotate the rotary encoder while the Display mode screen is displayed and select "B.GND TEXTURE" or "B.GND COLOR." The Function Guide appears on the display.
- 2** Press the **Function buttons** (**[1]** through **[6]**) that has your desired texture.
The Function buttons have textures/colours as follows.


	B.GND TEXTURE	B.GND Colour
[1]	MARBLE	C1
[2]	SKY	C2
[3]	WOOD	C3
[4]	GRAD.	C4
[5]	METAL	C5
[6]	ABYSS	C6

The background colour changes with respect to the selected texture.


- 3** When your selection has been made, press the **FUNC** (RETURN) button.
The display returns to the main menu screen.

Other Useful Features

(IVX-C806)

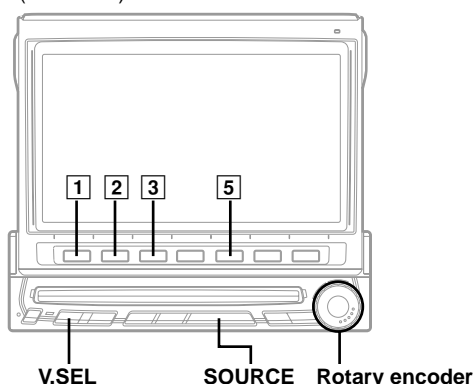

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

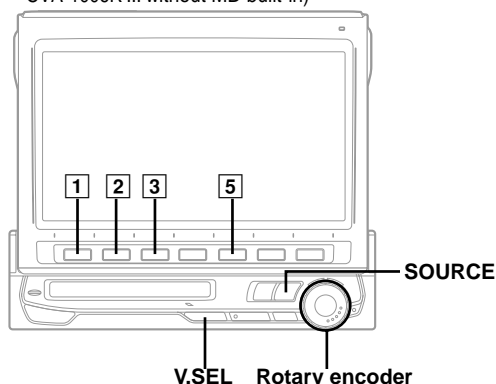

Setting Automatic Background Texture/Colour Scroll

Turn on the Automatic Background Texture/colour Scroll to automatically change background texture/colours. The background texture/colour will change each time the ignition key is turned off and turned back on again (12 textures/colours).

Immediately after inputting titles or changing the settings of Setup Mode or Display Mode (While the system is inputting the titles or data automatically) do not turn the ignition key (engine key) to OFF.

Otherwise, the title may not be written, or the settings may not be changed.


- 1** Press the **SOURCE** button.
The main menu appears on the display.
- 2** Press the **[5]** (DISPLAY) button to activate the Display mode.
The Display mode screen appears.
- 3** Rotate the rotary encoder and select "AUTO B.GND."
The Function Guide is displayed.
- 4** Press the **[2]** (ON) button to turn on the Auto Background Texture/colour Scroll mode.
To turn off the Auto Background Texture/colour Scroll mode, press the **[1]** (OFF) button.

The background textures/colours will scroll when the ignition key is turned off once and turned back on again as follows:


→ **MARBLE** → **SKY** → **WOOD** → **GRAD.** → **METAL**
← **C6** ← **C5** ← **C4** ← **C3** ← **C2** ← **C1** ← **ABYSS** ←

Switching Display Modes

- 1** Press and hold the **V.SEL** button for at least 2 seconds in the AUX or NAVI mode.
Each press changes the display modes as follows:

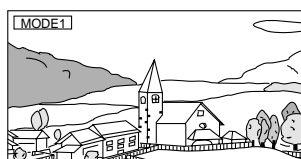


In the Mode 1 (Wide), the monitor displays a normal picture wider to fit in the wide-screen monitor by evenly stretching out the picture horizontally.

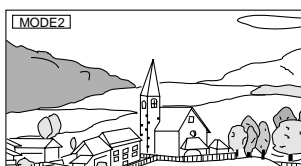

In the Mode 2 (Zoom), the monitor displays a normal picture wider to fit in the wide-screen monitor by unevenly stretching out. The centre portion of the picture is stretched out only slightly in order to make the important centre portion of the picture look natural.

Remote Control Operation

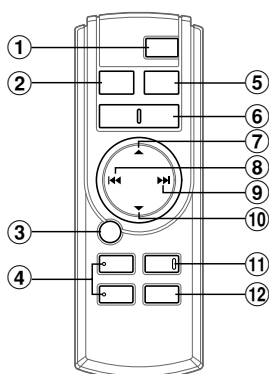

Controls on Remote Control

① Power Button

Press the button to turn the power on/off.

② Source Button

Press to select the audio source.

③ ►/II Button

Press and hold this button for more than 2 seconds to play or pause (In CD/MD/Changer mode).

Enter Button

- Press to execute the selection. (The same function as the rotary encoder on IVX-M706/IVX-C806/CVA-1006R.)
- Pressing and holding this button for more than 2 seconds turns the loudness on or off (when neither an equalizer nor a digital sound processor is connected).

④ ANGLE ▲▼ Buttons

Press the button to adjust the angle of the movable display.

⑤ Band/Programme Button

Radio mode: BAND Button

Press the button and the band will change as shown below.

→ FM1 → FM2 → FM3 → MW → LW →

Changer mode: BAND Button

Switches changers (when a Multi-Changer Switching device is connected).

⑥ Volume Adjustment Buttons

To increase the volume level:

Press the button

To decrease the volume level:

Press the button

The buttons have the same functions as rotating the rotary encoder on IVX-M706/IVX-C806/CVA-1006R.

⑦ ▲ Button

Radio mode: Pressing the button will select, in ascending order, stations programmed into the radio's presets as shown below.

→ 1 → 2 ... 6

CD/DVD Changer mode: DISC Select (UP) Button
Press the button to select a disc in ascending order.

⑧ ◀◀ Button

Radio mode: SEEK (DN) Button

CD/CD Changer mode: Press the button to go back to the beginning of the current track.

Audio Processor Mode:

- When the main menu is displayed:
After pressing the A.PROC button, tilt the button to select the factory preset curves in the selected mode.
- When the adjustment mode screen is displayed:
Tilt to select the personal preset curves.

⑨ ▶▶ Button

Radio mode: SEEK (UP) Button

CD/CD Changer mode: Press the button to advance to the beginning of the next track.

Audio Processor Mode:

- When the main menu is displayed:
After pressing the A.PROC button, tilt the button to select the factory preset curves in the selected mode.
- When the adjustment mode screen is displayed:
Tilt to select the personal preset curves.

⑩ ▼ Button

Radio mode: Pressing the button will select, in descending order, stations programmed into the radio's presets as shown below.

→ 6 → 5 ... 1

CD/DVD Changer mode: DISC Select (DN) Button
Press the button to select a disc in descending order.

⑪ Mute Button

- Press the button to lower the volume by 20 dB instantly. Press the button again to cancel.
- Press the button for at least 2 seconds to raise the monitor. Press the button again to lower the monitor.


⑫ Audio Processor Button**

Press the button to call the external audio processor mode.*

* For the operation of external audio processor, refer to the Owner's Manual of the external audio processor you purchased.


** This button is used in conjunction with an optional Ai-NET processor.

(IVX-C806)

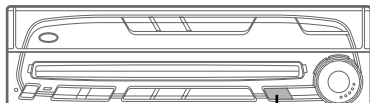

Remote sensor

(IVX-M706 with MD built-in
CVA-1006R ... without MD built-in)

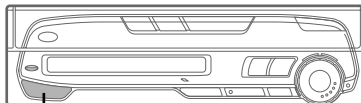


Remote sensor

Battery Replacement


Applicable battery: Use two “AAA” sized dry batteries or equivalent.

- Point the remote control transmitter toward the remote sensor on the IVX-C806/IVX-M706/CVA-1006R and use the remote control within 2 meters from the IVX-C806/IVX-M706/CVA-1006R.


- 1** Opening the battery cover
Slide out the battery cover while firmly pressing the direction of arrow.

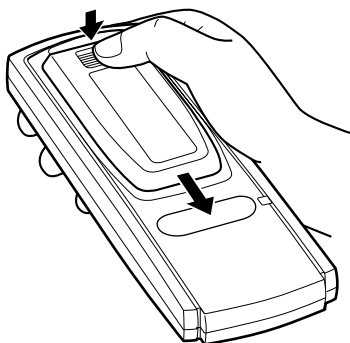

- 2** Replacing the battery
Put the batteries in the case observing the polarities as illustrated.

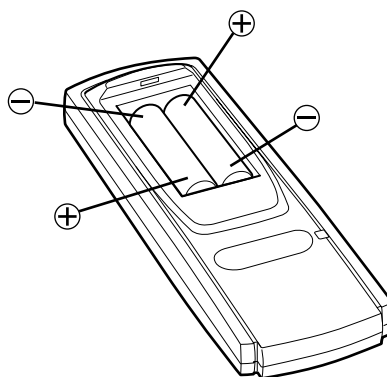

- 3** Closing the cover
Push the cover as illustrated until a click is heard.

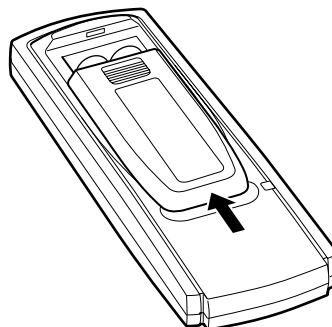

Information

In Case of Difficulty

If you encounter a problem, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected or consult your authorized Alpine dealer.

Basic

No function or display.

- Vehicle's ignition is off.
 - If connected following instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
 - Check power lead connections.
- Blown fuse.
 - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.
- Internal micro-computer malfunctioned due to interference noise etc.
 - Press the Reset button with a ball-point pen or other pointed article.
- Weak or no battery power.
 - Check battery.

No sound or unnatural sound.

- Incorrect setting of volume/balance/fader controls.
 - Readjust the controls.
- Connections are not properly or securely made.
 - Check the connections and firmly connect.

Screen not displayed.

- Brightness control is set at the minimum position.
 - Adjust the Brightness control.
- Temperature in the vehicle is too low.
 - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the DVD, CD player, navigation system are not securely made.
 - Check the connections and firmly connect.

Movement of displayed picture is abnormal.

- Temperature in the vehicle is too high.
 - Allow the vehicle's interior temperature to cool.

Unclear or noisy display.

- Fluorescent plate is worn out.
 - Replace the fluorescent plate.

Navigation system inoperative.

- Connections with the navigation system are improper.
 - Check the connections with the navigation system and connect the cables correctly and firmly.

Unclear picture display.

- Fluorescent tube is exhausted.
 - Replace the fluorescent tube*.

* The fluorescent tube replacement is not free of charge even within the warranty period, for the tube is an article of consumption.

Radio

Unable to receive stations.

- No antenna or open connection in cable.
 - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

Unable to tune stations in the seek mode.

- You are in a weak signal area.
 - Make sure the tuner is in the DX mode.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
 - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
 - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

Broadcast is noisy.

- The antenna is not the proper length.
 - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
 - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
 - If above solution does not work, tune in another station.

CD (IVX-C806 only)

CD playback sound is wavering.

- Moisture condensation in the CD Module.
 - Allow enough time for the condensation to evaporate (about 1 hour).

CD insertion not possible.

- A CD is already in the CD player.
 - Eject the CD and remove it.
- The CD is being improperly inserted.
 - Make sure the CD is being inserted following instructions in the CD Player Operation section.

Unable to fast forward or backward the CD.

- The CD has been damaged.
 - Eject the CD and discard it; using a damaged CD in your unit can cause damage to the mechanism.

CD playback sound skips due to vibration.

- Improper mounting of the unit.
 - Securely re-mount the unit.
- Disc is very dirty.
 - Clean the disc.
- Disc has scratches.
 - Change the disc.

CD playback sound skips without vibration.

- Dirty or scratched disc.
 - Clean the disc; damaged disc should be replaced.

MD (IVX-M706 only)

The MD could not be inserted.

- Another MD is already inserted.
 - Eject the inserted MD and insert the MD.
- The MD is inserted incorrectly.
 - Insert the MD correctly.

Sound skips due to vibration.

- Improper mounting.
 - Securely re-mount the unit.

Sound skips without vibration.

- Dirty or scratched MD. Bad recording condition.
 - Change the MD.

The play back won't start.

- Dirty or scratched MD. Bad recording condition. A non-recorded MD. Not a music MD.
 - Change the MD.
- Dew condensation.
 - Wait for a while before using.

The power turns on but the playback won't start.



- The sound volume level of the head unit is adjusted to minimum.
 - Increase the sound volume of the head unit.
-

Indication for CD Player (IVX-C806 only)



 
HI-TEMP

- Protective circuit is activated due to high temperature.
 - The indicator will disappear when the temperature returns to within operation range.
-

NO DISC



- No CD is inserted.
 - Insert a CD.
 - Although a disc is inserted, "NO DISC" is displayed and the unit does not start to play or eject the disc.
 - Remove the disc by following these steps:
 - 1) Press the  button.
The movable display will open.
 - 2) Press the  button again for at least 3 seconds while the movable display is open.
-

ERROR

- Mechanism error.
 - 1) Press the  button and eject the CD.
If not ejecting, consult your Alpine dealer.
 - 2) When the error indication remains after ejecting, press the  button again.
If the error indication still does not turn off after pressing the  button for a few times, consult your Alpine dealer.
-

NOTE

When the "ERROR" is displayed:

In case that the disc cannot be ejected by pressing the  button, press the RESET switch (refer to page 8) and press the  button again.

If not ejecting, consult your Alpine dealer.




 

Information

Indication for MD Player (IVX-M706 only)

NO DISC

- No MD is inserted.
 - Insert an MD.
-

ERROR

- No recording on disc (blank disc).
 - Load disc after recording.
 - Dirty or scratched MD, bad recording, a non recorded MD, not a music MD.
 - Press the MD  button and change the MD.
 - The MD is inserted incorrectly.
 - Press the MD  button and insert the MD correctly.
 - Dew condensation.
 - Wait a while.
 - Mechanism error.
 1. Press the MD  button and eject the MD.
If not ejecting, consult your Alpine dealer.
 2. When the error indication remains after ejecting, press the MD  button again.
If the error indication still does not turn off after pressing the MD  button for a few times, consult your Alpine dealer.
-

HI-TEMP

- Protective circuit is activated due to high temperature.
 - The indicator will disappear when the temperature returns to within operation range.
-

Indication for CD Changer (Optional)

HI-TEMP

- Temperature in the vehicle is too high.
 - Allow the vehicle's interior temperature to cool.
The indicator will disappear when the temperature returns to within operation range.
-

NO MAGAZINE

- No CD magazine is loaded into the CD Changer.
 - Insert a magazine.
-

ERROR-01

- Malfunction in the CD Changer.
 - Consult your Alpine dealer.
Press the magazine eject button and pull out the magazine. Check the indication and insert the magazine again. If the magazine cannot be pulled out, consult your Alpine dealer.
 - Magazine ejection not possible.
 - Press the magazine eject button.
If the magazine does not eject, see the Owner's Manual for the CD Changer.
-

ERROR-02

- A disc is left inside the CD Changer.
 - Press the EJECT button to activate the eject function.
When the CD Changer finishes the eject function, insert an empty CD magazine into the CD Changer to receive the disc left inside the CD Changer.
-

Specifications

MONITOR SECTION

Screen Size	6.5"
LCD Type	Transparent type TN LCD
Operation System	TFT active matrix
Number of Picture Elements	336,960 pcs. (1,440 × 234)
Effective Number of Picture Elements	99.99% or more
Illumination System	U-shaped cold cathode fluorescent tube

FM TUNER SECTION

Tuning Range	87.5 – 108.0 MHz
Mono Usable Sensitivity	0.7 µV
50 dB Quieting Sensitivity	11 µV
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	66 dB
Stereo Separation	35 dB

MW TUNER SECTION

Tuning Range	531 – 1,602 kHz
Sensitivity (IEC Standard)	25.1 µV/28 dB

LW TUNER SECTION

Tuning Range	153 – 281 kHz
Sensitivity (IEC Standard)	31.6 µV/30 dB

CD PLAYER SECTION (IVX-C806 only)

Frequency Response	5 – 20,000 Hz (±1 dB)
Wow & Flutter (% WRMS)	Below measurable limits
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Signal-to-Noise Ratio	95 dB
Channel Separation	85 dB (at 1 kHz)

MD PLAYER SECTION (IVX-M706 only)

Signal-to-Noise Ratio	90 dB
Dynamic Range	90 dB (at 1 kHz)
Wow & Flutter (% WRMS)	Below measurable limits
Frequency Response	20 – 20,000 Hz (±0.5 dB)

REMOTE CONTROL

Battery Type	AAA batteries (2 pcs.)
Width	42 mm (1-21/32")
Height	121 mm (4-25/32")
Depth	23 mm (29/32")
Weight	50 g (1.8 oz)

GENERAL

Power Requirement	14.4 V DC (11–15 V allowable)
Operating temperature	+32°F to +113°F (0°C to + 45°C)
Maximum Power Output	45 W × 4
Output Voltage	1,000 mV/10k ohms
Maximum Pre-Output Voltage	4 V/10k ohms
Bass	±15 dB at 30 Hz
Treble	±15 dB at 10 kHz
Weight (Monitor Section)	1.7 kg (3 lbs. 12 oz)
(Tuner Section)	1.6 kg (3 lbs. 8 oz)

CHASSIS SIZE (Monitor section)

Width	178 mm (7")
Height	50 mm (2")
Depth	156 mm (6-1/8")

CHASSIS SIZE (Tuner section)

Width	259 mm (10-13/64")
Height	37 mm (1-7/16")
Depth	177.5 mm (6-15/16")

NOTES

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.

Installation and Connections

Before installing or connecting the unit, please read the following and pages 3 to 6 of this manual thoroughly for proper use.

Warning

MAKE THE CORRECT CONNECTIONS.

Failure to make the proper connections may result in fire or product damage.

USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.

Failure to do so may result in electric shock or injury due to electrical shorts.

DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

DO NOT SPLICE INTO ELECTRICAL CABLES.

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

KEEP SMALL OBJECTS SUCH AS BOLTS OR SCREWS OUT OF THE REACH OF CHILDREN.

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR GEARSHIFT.

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

Caution

HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wires insulation from being cut by the metal edge of the hole.

DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

Precautions

- Be sure to disconnect the cable from the (–) battery post before installing your IVX-C806/IVX-M706/CVA-1006R. This will reduce any chance of damage to the unit in case of a short-circuit.
- Be sure to connect the colour coded leads according to the diagram. Incorrect connections may cause the unit to malfunction or damage to the vehicle's electrical system.
- When making connections to the vehicle's electrical system, be aware of the factory installed components (e.g. on-board computer). Do not tap into these leads to provide power for this unit. When connecting the IVX-C806/IVX-M706/CVA-1006R to the fuse box, make sure the fuse for the intended circuit of the IVX-C806/IVX-M706/CVA-1006R has the appropriate amperage. Failure to do so may result in damage to the unit and/or the vehicle. When in doubt, consult your ALPINE dealer.
- The IVX-C806/IVX-M706/CVA-1006R uses female RCA-type jacks for connection to other units (e.g. amplifier) having RCA connectors. You may need an adaptor to connect other units. If so, please contact your authorized ALPINE dealer for assistance.
- Be sure to connect the speaker (–) leads to the speaker (–) terminal. Never connect left and right channel speaker cables to each other or to the vehicle body.
- The Display must be completely retracted in the casing when installing. If it is not, problems may occur.
- When installing in automobiles, make sure the Display can open/close without coming in contact with the shift lever.

IMPORTANT

Please record the serial number of your unit in the space provided below and keep it as a permanent record. The serial number plate is located on the bottom of the unit.


SERIAL NUMBER: _____
INSTALLATION DATE: _____
INSTALLATION TECHNICIAN: _____
PLACE OF PURCHASE: _____

Installation

Installing the Monitor


• Place of installation

Before determining the position of installation, check that the display will not hamper gear shifting when it is opened and closed in that position.

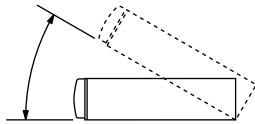


NOTE

Install at an angle of within 30 degrees from the horizontal.

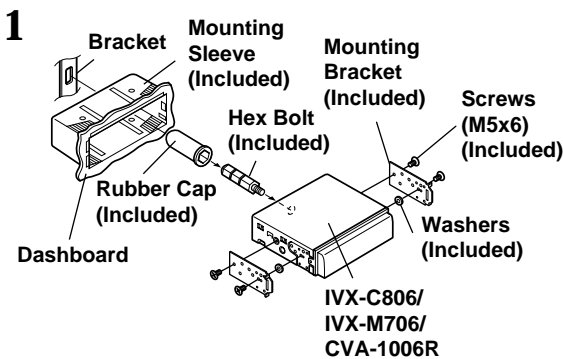

Slide mounting sleeve from main unit (see Removal Procedure below). Slide the mounting sleeve into the dashboard. Install the supplied bracket to the monitor.

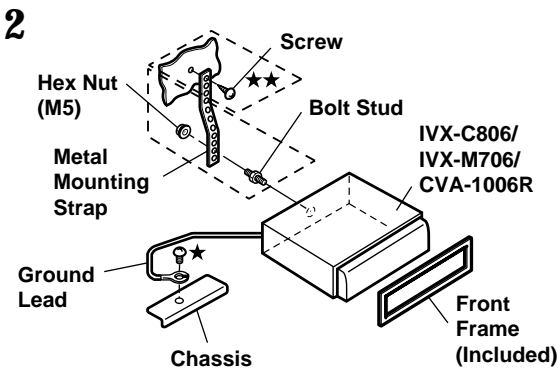


When your vehicle has the Bracket, mount the long hex bolt onto the rear panel of the IVX-C806/IVX-M706/CVA-1006R and put the Rubber Cap on the hex bolt. If your vehicle does not have the Mounting Support, reinforce the monitor unit with the metal mounting strap (not supplied). Secure the ground lead of the unit to a clean metal spot using a screw (★) already attached to the vehicle's chassis.

NOTE

For the screw marked ★★, use an appropriate screw for the chosen mounting location.

Connect each input lead coming from an amplifier or equalizer to the corresponding output lead coming from the left rear of the IVX-C806/IVX-M706/CVA-1006R. Connect all other leads of the IVX-C806/IVX-M706/CVA-1006R according to details described in the Connections section.

3

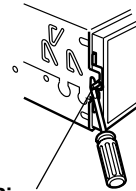

Lock Pin

Slide the IVX-C806/IVX-M706/CVA-1006R into the dashboard. When the unit is in place, make sure the locking pins are fully seated in the down position. This can be done by pressing firmly in on the unit while pushing the locking pin down with a small screwdriver. This ensures that the unit is properly locked and will not accidentally come out from the dashboard. Install the supplied Front Frame.


Removal

1. Use a small screwdriver (or similar tool) to push the locking pins to the "up" position (see Step 3). As each pin is unlocked, gently pull out on the unit to make sure it does not re-lock before unlocking the second pin.
2. Pull the unit out, keeping it unlocked as you do so.

Installation and Connections

<JAPANESE CAR>

To install using the vehicle's genuine bracket.

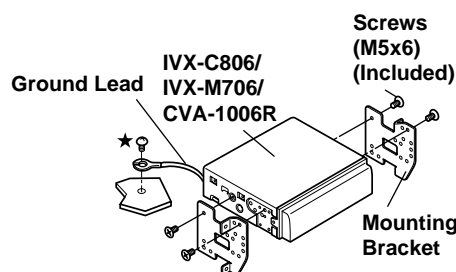


Installing the Tuner

When mounting with Velcro fasteners

When mounting the tuner with the Velcro fasteners, be sure to choose a flat location.

Do not hang the unit from the bottom of the dashboard or rear deck with the Velcro fasteners.

- 1 Placing the Velcro fasteners onto the Tuner. Peel off the protective paper from the adhesive side of the Velcro fasteners. Attach two pieces of the Velcro fasteners (rough textured) onto the bottom of the Tuner.

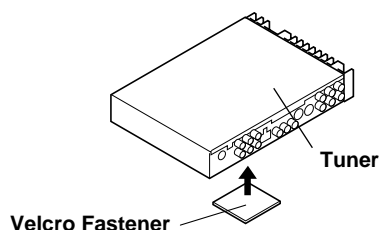


- 2 Attach two pieces of the Velcro fasteners (soft textured) onto the mounting location such as under the front passenger's seat etc. Mount the Tuner aligning the Velcro Fasteners.

When mounting with Screws


When mounting the tuner with the screws, be sure to choose a flat location.

When making holes, be careful not to scratch any pipes or wires.

- 1 Connect the bracket to both the flanks of the tuner with the supplied pan screws (M4x8).

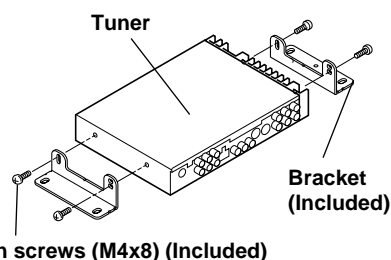


- 2 Install the tuner on the floor with the supplied hexagon flange-head screws (M5x15).

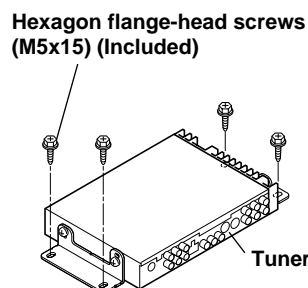


Parking Brake Lead Connection

If necessary, use a pinch connector to connect the parking brake lead, etc.

1

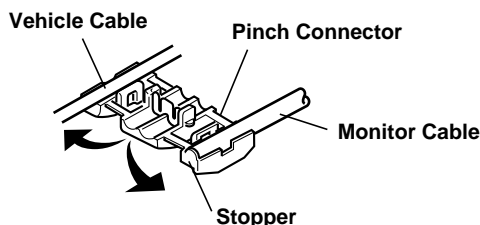


2

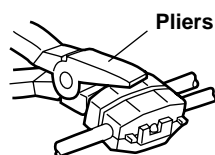

Connection Diagram of SPST Switch (Sold Separately)

(If the ACC power supply is not available)

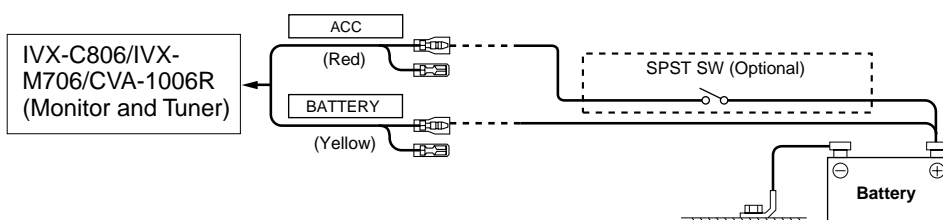

NOTE

If your vehicle has no ACC power supply, add an SPST (Single-Pole, Single-Throw) switch (sold separately).
If the switched power (ignition) lead of the IVX-C806/IVX-M706/CVA-1006R is connected directly to the positive (+) post of the vehicle's battery, the IVX-C806/IVX-M706/CVA-1006R draws some current (several hundred milliamperes) even when its switch is placed in the OFF position and the battery may be discharged.


Cautions for handling the I/F cord

The I/F cord is used to connect the monitor and the tuner BOX.

Press the LOCK button gently while removing the I/F cord out of the terminal. (See the illustration below.)
If you pull out the lock by force, the lock pins will be forced. This will cause a bad connection.

Some possible problems:


- The power of the unit turns off frequently.
- The display disappears.
- The monitor doesn't open or close.

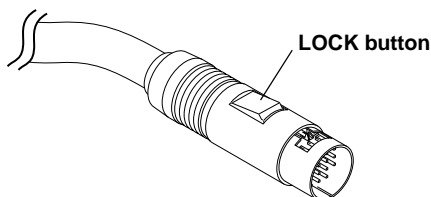

Pull out the cord before you unlock the pins.

Installation and Connections

Connections (IVX-C806/IVX-M706/CVA-1006R Wiring Diagram)

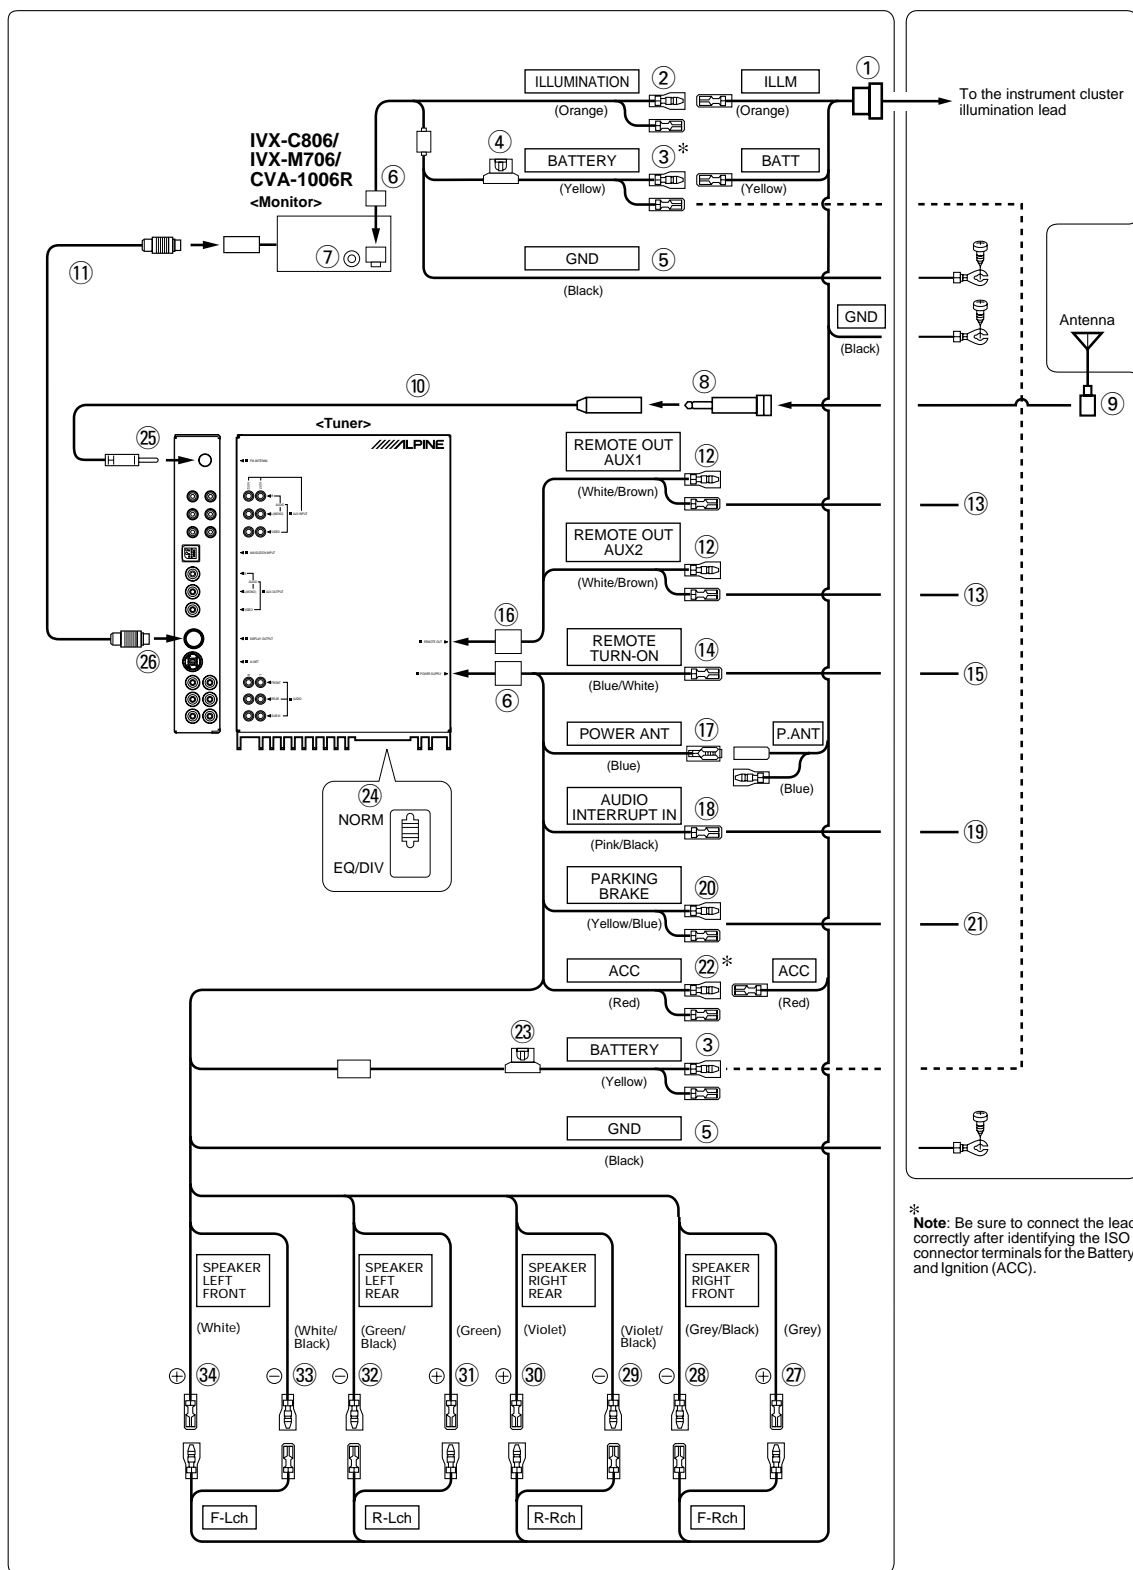

- ① ISO Connector (Included)
- ② Illumination Lead (Orange)

This lead may be connected to the vehicle's instrument cluster illumination lead. This will allow the backlighting of the IVX-C806/IVX-M706/CVA-1006R to dim whenever the vehicle's lights are turned on.
- ③ Battery Lead (Yellow)

Connect this lead to the positive (+) post of the vehicle's battery.
- ④ Fuse Holder (7.5A)
- ⑤ Ground Lead (Black)

Connect this lead to a good chassis ground on the vehicle. Make sure the connection is made to bare metal and is securely fastened using the sheet metal screw provided.
- ⑥ Power Supply Connector
- ⑦ Remote Control Interface Connector

Connect to the remote control interface box.
- ⑧ ISO Antenna Converter Plug (Included)
- ⑨ ISO Antenna Plug
- ⑩ Antenna Extension Cable
- ⑪ I/F (Interface) Lead
- ⑫ Remote Control Output Lead (White/Brown)
- ⑬ Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ⑭ Remote Turn-On Lead (Blue/White)

Connect this lead to the remote turn-on lead of your amplifier or signal processor.
- ⑮ To amplifier or equalizer
- ⑯ Remote Output Terminal
- ⑰ Power Antenna Lead (Blue)

Connect this lead to the +B terminal of your power antenna, if applicable.
- ⑱ Audio Interrupt In Lead (Pink/Black)
- ⑲ To vehicle phone
- ⑳ Parking Brake Lead (Yellow/Blue)

Connect this lead to the power supply side of the parking brake switch to transmit the parking brake status signals to the IVX-C806/IVX-M706/CVA-1006R.
- ㉑ Connect this lead to the parking brake lead powered when parking brake is engaged.
- ㉒ Switched Power Lead (Ignition) (Red)

Connect this lead to an open terminal on the vehicle's fuse box or another unused power source which provides (+) 12V only when the ignition is turned on or in the accessory position.
- ㉓ Fuse Holder (15A)
- ㉔ System Switch


When connecting an equalizer or divider using Ai-NET feature, place this switch in the EQ/DIV position. When no device is connected, leave the switch in the NORM position.

NOTE
Be sure to turn the power off to the unit before changing the switch position.
- ㉕ Antenna Receptacle
- ㉖ Display Output Terminal


Connect a monitor to this terminal using the I/F lead (included).
- ㉗ Right Front (+) Speaker Output Lead (Grey)
- ㉘ Right Front (-) Speaker Output Lead (Grey/Black)
- ㉙ Right Rear (-) Speaker Output Lead (Violet/Black)
- ㉚ Right Rear (+) Speaker Output Lead (Violet)
- ㉛ Left Rear (+) Speaker Output Lead (Green)
- ㉜ Left Rear (-) Speaker Output Lead (Green/Black)
- ㉝ Left Front (-) Speaker Output Lead (White/Black)
- ㉞ Left Front (+) Speaker Output Lead (White)

Installation and Connections


System Wiring Diagram

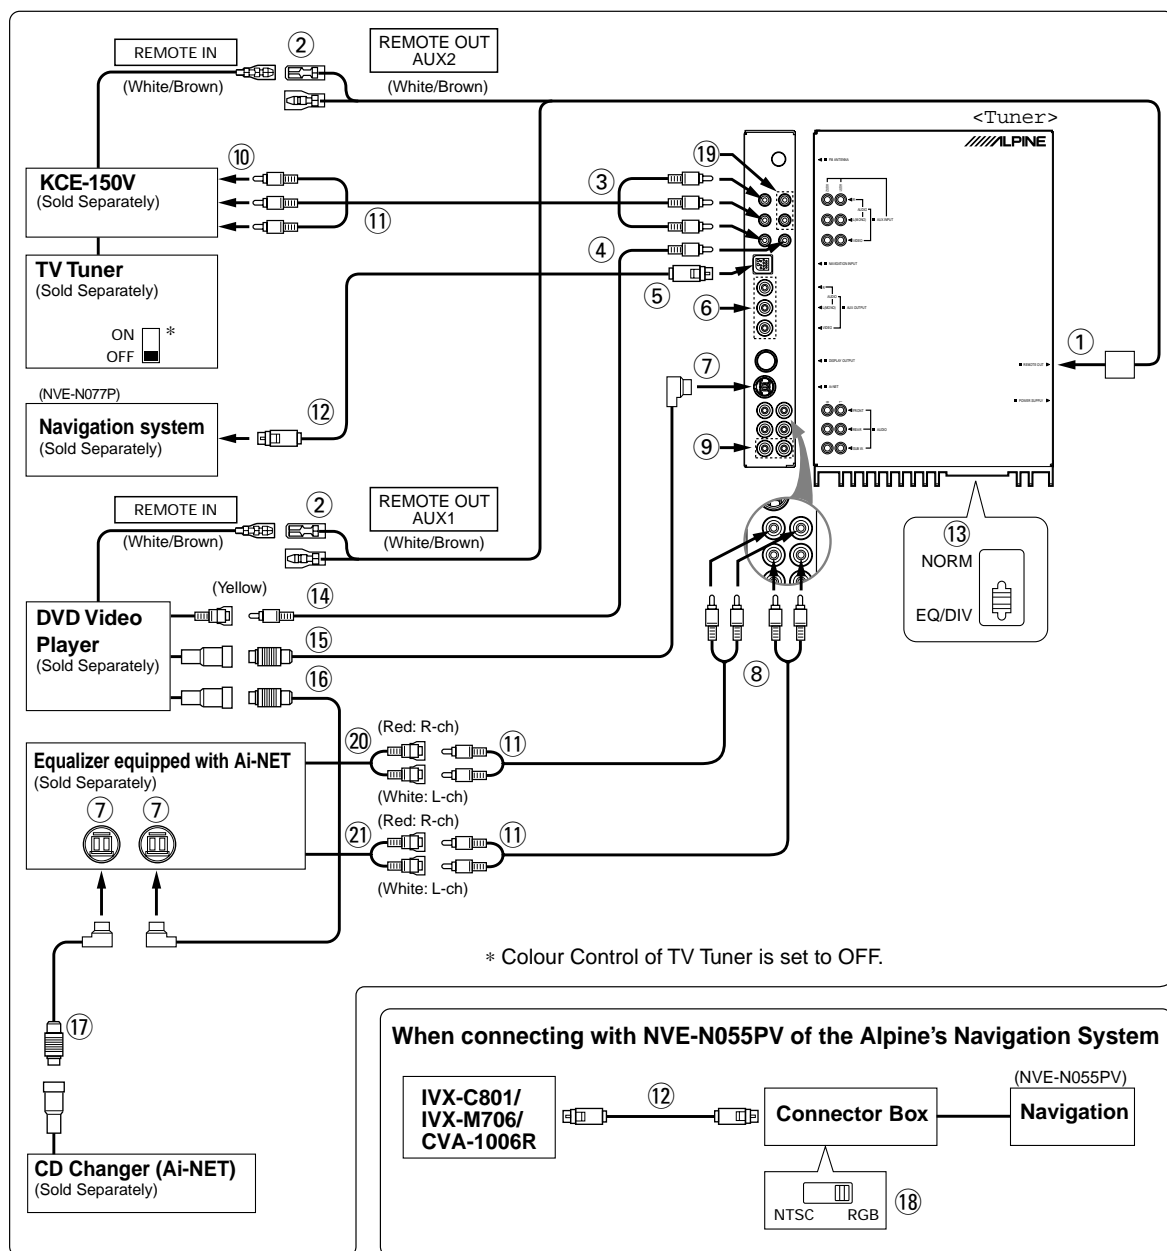

When connecting with NVE-N055PS of the Alpine's Navigation System

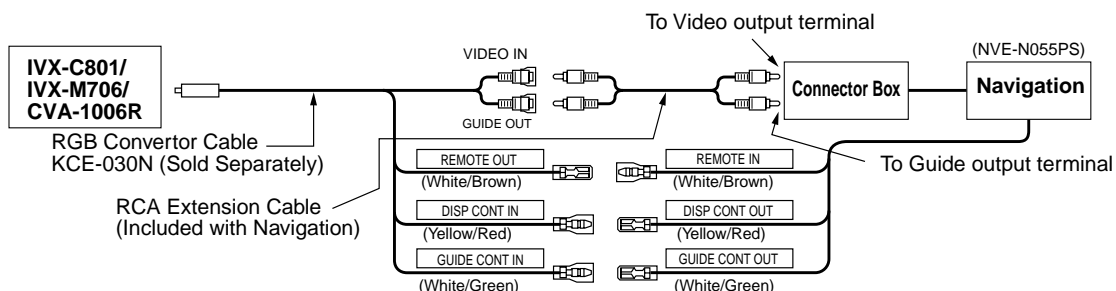

When connecting the DVD Changer

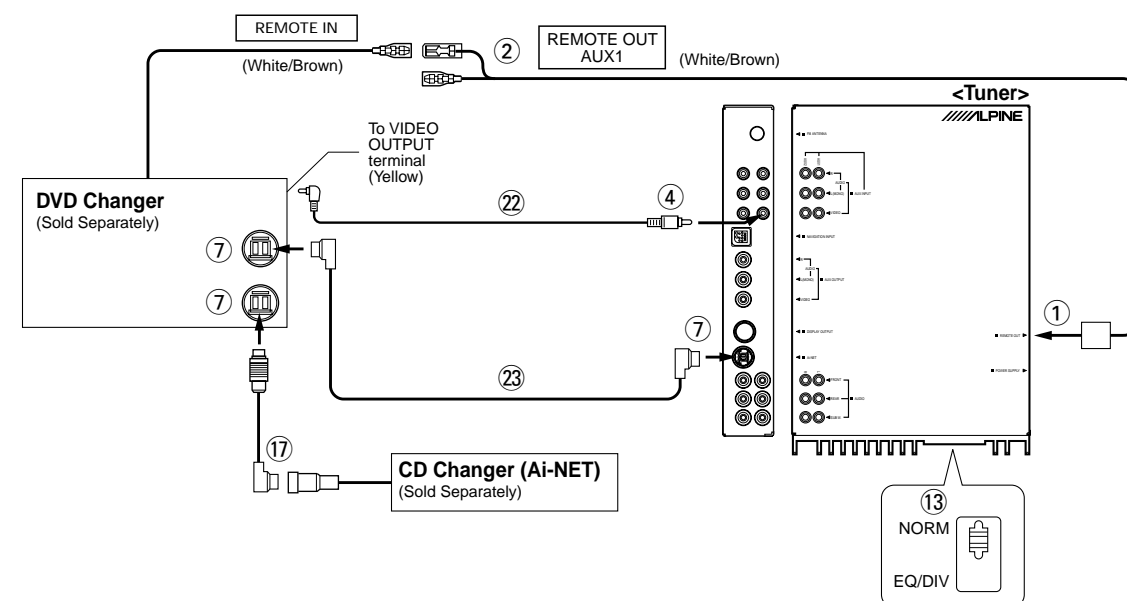

- ① Remote Output Terminal
- ② Remote Control Output Lead (White/Brown)
Connect this lead to the remote control input lead. This lead outputs the controlling signals from the remote control.
- ③ To AUX Audio/Video Input (AUX2) Terminals
- ④ AUX Video Input (AUX1) Terminal
Connect the video output lead of a DVD video player or DVD Changer to this terminal.
- ⑤ RGB Input Terminal
Connect this to the RGB output terminal of the Navigation System.
- ⑥ AUX Output Terminal
Use when connecting an optional monitor etc.
- ⑦ Ai-NET Connector
Connect this to the output or input connector of other product equipped with Ai-NET.
- ⑧ Rear/Front Input Terminal
Use when connecting an amplifier/equalizer.
- ⑨ Subwoofer Input Terminal
Connect the output lead of an amplifier for the subwoofer to this terminal.
- ⑩ To Video output Terminals
- ⑪ RCA Extension Cable (Sold separately)

- ⑫ RGB Cable (Included with Navigation)
- ⑬ System Switch
When connecting an equalizer or divider using Ai-NET feature, place this switch in the EQ/DIV position. When no device is connected, leave the switch in the NORM position.
NOTE
Be sure to turn the power off to the unit before changing the switch position.
- ⑭ RCA Extension Cable (Included with DVD video player)
- ⑮ Ai-NET Cable (Included with DVD video player)
- ⑯ Ai-NET Cable (Included with Equalizer)
- ⑰ Ai-NET Cable (Included with CD Changer)
- ⑱ RGB/NTSC Output Switch
To display the picture of Navigation system on the external monitor, place the switch in the NTSC Output position.
- ⑲ AUX Audio Input (AUX1) Terminals
- ⑳ Front Output RCA Connectors
- ㉑ Rear Output RCA Connectors
- ㉒ RCA Extension cable (Included with DVD Changer)
- ㉓ Ai-NET Cable (Included with DVD Changer)

